



**FlinSlim MPPT Stack 5kVA-48V  
Solar Inverter**

**User Manual**

# Table Of Contents

|  |           |
|--|-----------|
| <b>ABOUT THIS MANUAL .....</b>                                     | <b>1</b>  |
| Purpose .....  | 1         |
| Scope .....  | 1         |
| <b>SAFETY INSTRUCTIONS.....</b>                                    | <b>1</b>  |
| <b>INTRODUCTION.....</b>   | <b>2</b>  |
| Features .....   | 2         |
| Basic System Architecture .....                                    | 2         |
| Product Overview .....   | 3         |
| <b>INSTALLATION.....</b>   | <b>4</b>  |
| Unpacking and Inspection .....                                     | 4         |
| Installation .....   | 4         |
| Battery Connection .....   | 5         |
| AC Input/Output Connection.....                                    | 6         |
| PV Connection.....   | 7         |
| Communication Connection.....                                      | 8         |
| Dry Contact Signal.....  | 9         |
| BMS Communication .....  | 9         |
| <b>OPERATION .....</b>   | <b>10</b> |
| Power ON/OFF .....   | 10        |
| Operation and Display Panel .....                                  | 10        |
| LCD Display Icons .....  | 11        |
| LCD Setting .....  | 13        |
| Display Setting.....   | 21        |
| Operating Mode Description .....                                   | 24        |
| Fault Reference Code.....  | 26        |
| Warning Indicator.....   | 27        |
| Battery Equalization.....  | 27        |
| <b>SPECIFICATIONS.....</b>   | <b>30</b> |
| Table 1 Line Mode Specifications.....                              | 30        |
| Table 2 Battery Mode Specifications.....                           | 30        |
| Table 3 Charge Mode Specifications .....                           | 30        |
| Table 4 ECO/Bypass Mode Specifications .....                       | 32        |
| <b>TROUBLE SHOOTING .....</b>                                      | <b>33</b> |
| <b>PARALLEL FUNCTION .....</b>                                     | <b>34</b> |
| <b>Appendix A: Approximate Back-up Time Table .....</b>            | <b>48</b> |
| <b>Appendix B: BMS Communication Installation.....</b>             | <b>49</b> |
| <b>Appendix C: The Wi-Fi Operation Guide in Remote Panel .....</b> | <b>54</b> |

# ABOUT THIS MANUAL

## Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

## Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

# SAFETY INSTRUCTIONS



**WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.**

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. Fuses are provided as over-current protection for the battery supply.
11. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

# INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

## Features

- Pure sine wave inverter
- Built-in MPPT solar charge controller
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function
- Zero-transfer Time

## Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or Utility.
- PV modules

Consult with your system integrator for other possible system architectures depending on your requirements. This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



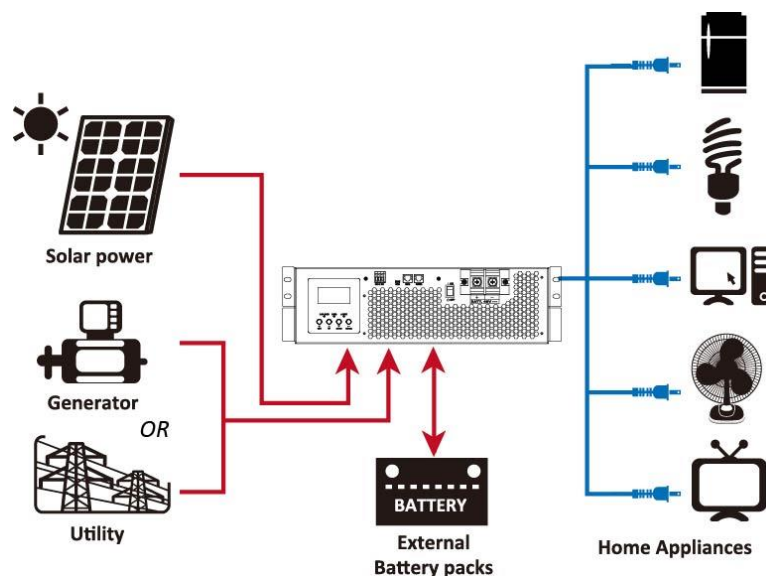


Figure 1 Hybrid Power System

## Product Overview

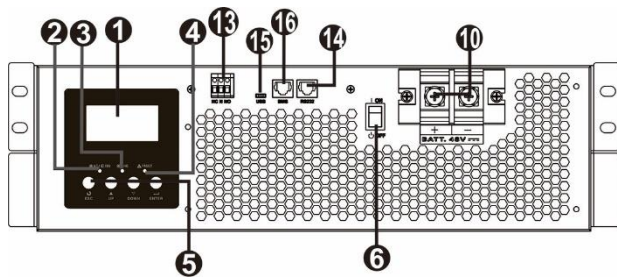

**Front**

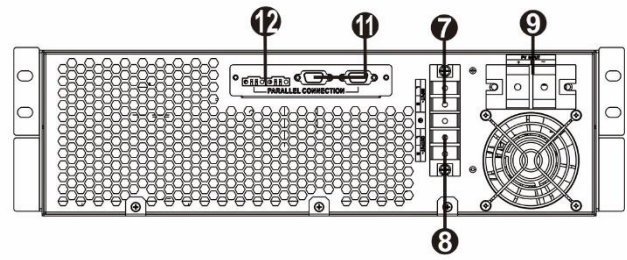

**Back**

1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function buttons
6. Power on/off switch
7. AC input
8. AC output
9. PV input
10. Battery input
11. Parallel communication cable (only for parallel model)
12. Current sharing cable (only for parallel model)
13. Dry contact
14. RS-232 communication port
15. USB port
16. BMS communication port: CAN and RS232 or RS485

**NOTE:** For parallel model installation and operation, please check separate parallel installation guide for the details.

# INSTALLATION

## Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- Communication cable x 1
- Software CD x 1
- Parallel cable x 2


## Installation

Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between 0°C and 40°C to ensure optimal operation.

## Rack Mounting

Please follow the diagram below to install the Inverter module in a 19-inch bay at the desired height in the upright cabinet. Secure the device adequately and fix it to the cabinet with six screws.

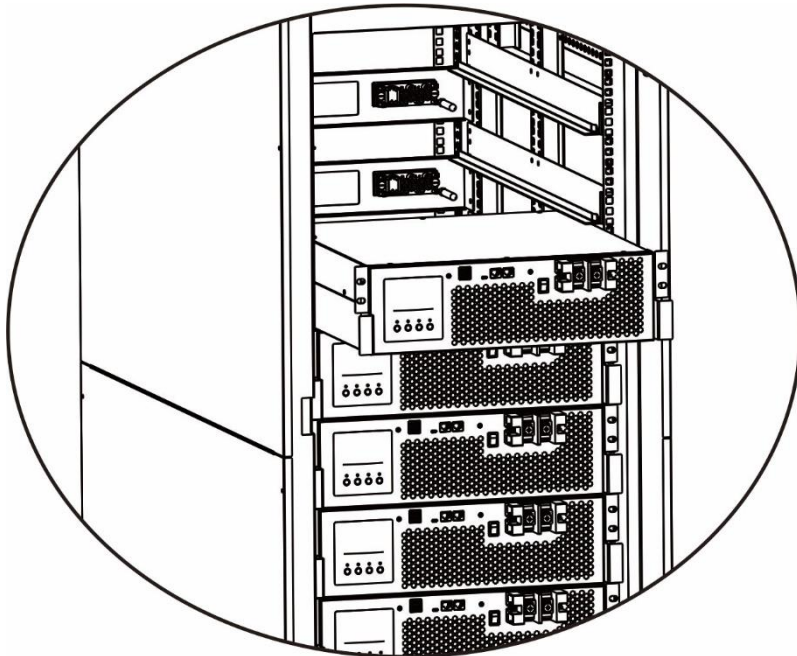


## Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

**Ring terminal:**

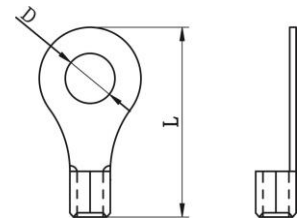



**Recommended battery cable and terminal size:**


| Model   | Typical Amperage | Battery Capacity | Wire Size | Ring Terminal         |            |        | Torque Value |
|---------|------------------|------------------|-----------|-----------------------|------------|--------|--------------|
|         |                  |                  |           | Cable mm <sup>2</sup> | Dimensions |        |              |
|         |                  |                  |           |                       | D (mm)     | L (mm) |              |
| 3KW-24V | 140A             | 200AH            | 1*1/0AWG  | 60                    | 8.4        | 49.7   | 4.5 Nm       |
|         |                  |                  | 2*4AWG    | 44                    | 8.4        | 49.7   |              |
| 3K-48V  | 70A              | 100A             | 1*4AWG    | 22                    | 6.4        | 33.2   | 4.5 Nm       |
| 5KW     | 110A             | 200AH            | 1*1/0AWG  | 60                    | 8.4        | 49.7   | 4.5 Nm       |
|         |                  |                  | 2*4AWG    | 44                    | 8.4        | 49.7   |              |

Please follow below steps to implement battery connection:

1. Assemble battery ring terminal based on recommended battery cable and terminal size.
2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for 3KW-24 model, 100Ah for 3KW-48V and at least 200Ah capacity battery for 5KW model.
3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

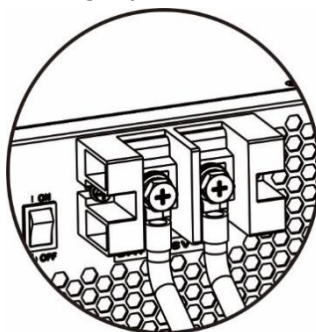

 **WARNING: Shock Hazard**  
Installation must be performed with care due to high battery voltage in series.

 **CAUTION!!** Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.  
**CAUTION!!** Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

**CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

## AC Input/Output Connection

**CAUTION!!** Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 30A for 3KW and 50A for 5KW.

**CAUTION!!** There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

### Suggested cable requirement for AC wires

| Model              | Typical Amperage | Wire Size | Ring Terminal         |            |        | Torque Value |
|--------------------|------------------|-----------|-----------------------|------------|--------|--------------|
|                    |                  |           | Cable mm <sup>2</sup> | Dimensions |        |              |
|                    |                  |           |                       | D (mm)     | L (mm) |              |
| 3KW-24V<br>3KW-48V | 20A              | 10 AWG    | 5.5                   | 5.3        | 19     | 1.4~1.6 Nm   |
| 5KW                | 40A              | 8 AWG     | 8                     | 5.3        | 19     | 1.4~1.6 Nm   |

Please follow below steps to implement AC input/output connection:



1. Assemble the ring terminal based on the recommended cable and terminal size
2. Insert the ring terminal of the cable flatly into AC input connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure the terminals are tightly screwed. Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**

L → **LINE (brown or black)**

N → **Neutral (blue)**

### Ring terminal:

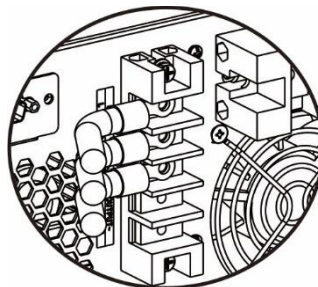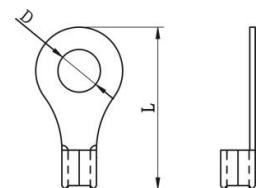

**WARNING:** Be sure that AC power source is disconnected before attempting to hardwire it to the unit.


3. Then, Insert the ring terminal of the cable flatly into AC output connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure the terminals are tightly screwed. Be sure to connect PE protective conductor (⊕) first.

⊕ → **Ground (yellow-green)**



**L→LINE (brown or black)**

**N→Neutral (blue)**

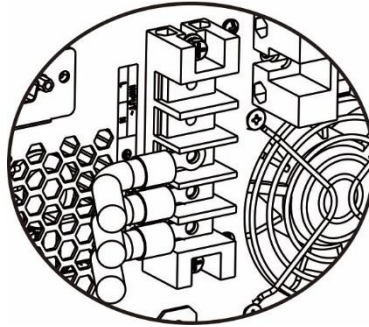

4. Make sure the wires are securely connected.

**CAUTION: Important**

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

**CAUTION: Important**

When input source is the generator, it's suggested to choose the generator by following parameters:

- The recommend generator rating should be at least 2X of inverter capacity.
- Generator output: Pure Sine Wave
- Generator output voltage rms range: 180 ~ 270Vac
- Generator output frequency range: 45Hz ~ 63Hz

It's recommended to test the generator with the inverter before the installation. Few generators complied above parameters may still not be accepted by the inverter as the input source.

## PV Connection

**CAUTION:** Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

| Model          | Typical Amperage | Wire Size | Ring Terminal         |            |        | Torque Value |
|----------------|------------------|-----------|-----------------------|------------|--------|--------------|
|                |                  |           | Cable mm <sup>2</sup> | Dimensions |        |              |
|                |                  |           |                       | D (mm)     | L (mm) |              |
| 3KW-24V        | 60A              | 8 AWG     | 8                     | 6.4        | 29.8   | 2~3 Nm       |
| 3KW-48V<br>5KW | 80A              | 6 AWG     | 14                    | 6.4        | 29.8   | 2~3 Nm       |

**PV Module Selection:**



When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

| Solar Charging Mode                |           |           |     |
|------------------------------------|-----------|-----------|-----|
| INVERTER MODEL                     | 3KW-24V   | 3KW-48V   | 5KW |
| Max. PV Array Open Circuit Voltage | 145Vdc    |           |     |
| PV Array MPPT Voltage Range        | 30~115Vdc | 60~115Vdc |     |

Please follow below steps to implement PV module connection:

1. Assemble the ring terminal based on the recommended cable and terminal size.
2. Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

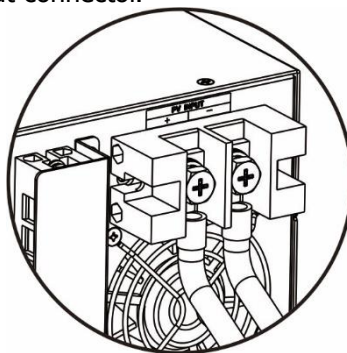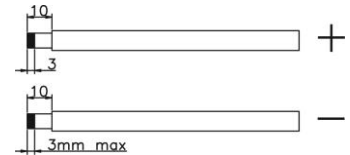

3. Make sure the wires are securely connected.


**Communication Connection**

**Serial Connection**

Please use supplied communication cable to connect to inverter and PC. Insert bundled CD into a computer and follow on-screen instruction to install the monitoring software. For the detailed software operation, please check user manual of software inside of CD.


**Wi-Fi Connection**

This unit is equipped with a Wi-Fi transmitter. Wi-Fi transmitter can enable wireless communication between off-grid inverters and monitoring platform. Users can access and control the monitored inverter with downloaded APP. You may find "WatchPower" app from the Apple® Store or "WatchPower Wi-Fi" in Google® Play Store. All data loggers and parameters are saved in iCloud. For quick installation and operation, please check Appendix III.

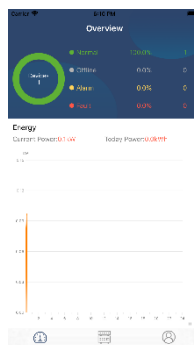

## Dry Contact Signal

There is one dry contact (3A/250VAC) available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.


| Unit Status  | Condition   |  | Dry contact port:  |        |       |
|--|---|--|---|--------|-------|
|  |   |  | NC & C  | NO & C |       |
| Power Off  | Unit is off and no output is powered.                 |  | Close   | Open   |       |
| Power On   | Output is powered from Utility.                       |  | Close   | Open   |       |
|  | Output is powered from Battery power or Solar energy. | Program 01 set as USB (utility first)                        | Battery voltage < Low DC warning voltage  | Open   | Close |
|  |   |  | Battery voltage > Setting value in Program 13 or battery charging reaches floating stage              | Close  | Open  |
|  |   | Program 01 is set as SBU (SBU priority) or SUB (solar first) | Battery voltage < Setting value in Program 12   | Open   | Close |
| Battery voltage > Setting value in Program 13 or battery charging reaches floating stage |   |  | Close   | Open   |       |

## BMS Communication

If connecting to lithium battery, it's requested to buy a special communication cable. For the detailed BMS communication and installation, please check Appendix B – BMS Communication Installation.

# OPERATION


## Power ON/OFF

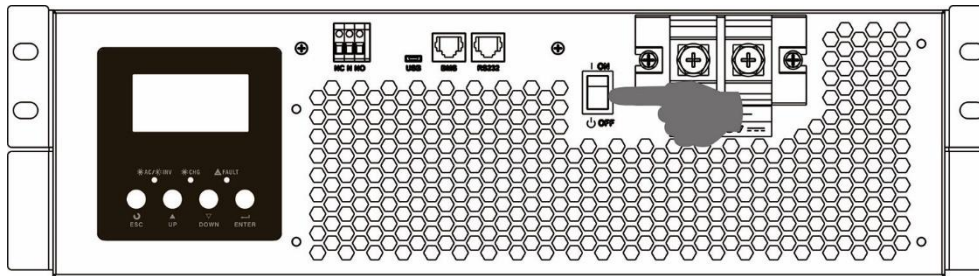

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

## Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

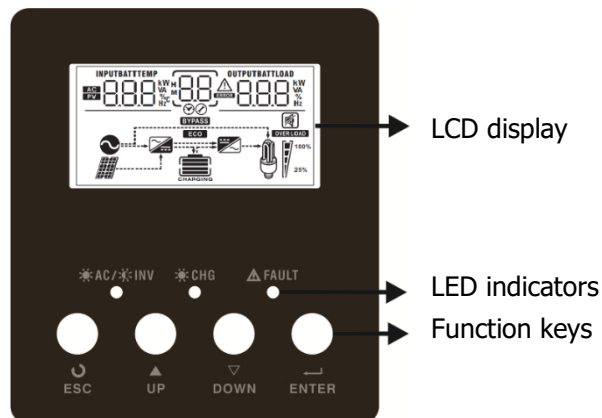


### LED Indicator


| LED Indicator  |       | Messages |   |
|----------------|-------|----------|---|
| ☀️ AC / ☀️ INV | Green | Solid On | Output is powered by utility in Line mode.          |
|                |       | Flashing | Output is powered by battery or PV in battery mode. |
| ☀️ CHG         | Green | Solid On | Battery is fully charged.                           |
|                |       | Flashing | Battery is charging.                                |
| ⚠️ FAULT       | Red   | Solid On | Fault occurs in the inverter.                       |
|                |       | Flashing | Warning condition occurs in the inverter.           |

### Function Keys


| Function Key | Description  |
|--------------|--|
| ESC          | To exit setting mode   |
| UP           | To go to previous selection                                    |
| DOWN         | To go to next selection  |
| ENTER        | To confirm the selection in setting mode or enter setting mode |

## LCD Display Icons

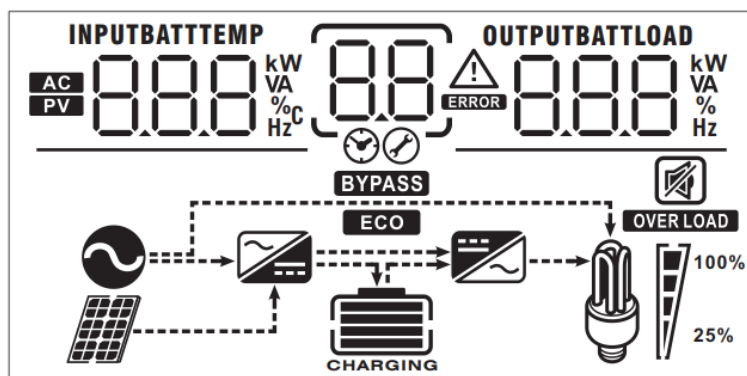

| Icon  | Function description   |  |
|---|--|--|
| <b>Input Source Information</b>   |  |  |
| <b>AC</b>   | Indicates the AC input.  |  |
| <b>PV</b>   | Indicates the PV input   |  |
| <b>INPUTBATT</b><br>888 kW<br>VA<br>%C<br>Hz  | Indicate input voltage, input frequency, PV voltage, battery voltage and charger current.                      |  |
| <b>Configuration Program and Fault Information</b>  |  |  |
| 88<br>⚙️  | Indicates the setting programs.  |  |
| 88 ⚠️   | Indicates the warning and fault codes.   |  |
| Warning: 88 ⚠️  | flashing with warning code.  |  |
| Fault: 88 ERROR   | lighting with fault code   |  |
| <b>Output Information</b>   |  |  |
| <b>OUTPUTBATTLOAD</b><br>888 kW<br>VA<br>%<br>Hz  | Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.     |  |
| <b>Battery Information</b>  |  |  |
| <br>CHARGING | Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode. |  |
| In AC mode, it will present battery charging status.  |  |  |
| Status  | Battery voltage  | LCD Display  |
| Constant Current mode / Constant Voltage mode   | <2V/cell   | 4 bars will flash in turns.  |
|   | 2 ~ 2.083V/cell  | Bottom bar will be on and the other three bars will flash in turns.    |
|   | 2.083 ~ 2.167V/cell  | Bottom two bars will be on and the other two bars will flash in turns. |
|   | > 2.167 V/cell   | Bottom three bars will be on and the top                               |

|  |  | bar will flash.    |         |          |
|--|--|--------------------|---------|----------|
| Floating mode. Batteries are fully charged.        |  | 4 bars will be on. |         |          |
| In battery mode, it will present battery capacity. |  |                    |         |          |
| Load Percentage                                    | Battery Voltage  | LCD Display        |         |          |
| Load >50%  | < 1.717V/cell  |                    |         |          |
|  | 1.717V/cell ~ 1.8V/cell  |                    |         |          |
|  | 1.8 ~ 1.883V/cell  |                    |         |          |
|  | > 1.883 V/cell   |                    |         |          |
| 50%> Load > 20%                                    | < 1.817V/cell  |                    |         |          |
|  | 1.817V/cell ~ 1.9V/cell  |                    |         |          |
|  | 1.9 ~ 1.983V/cell  |                    |         |          |
|  | > 1.983  |                    |         |          |
| Load < 20%   | < 1.867V/cell  |                    |         |          |
|  | 1.867V/cell ~ 1.95V/cell                                       |                    |         |          |
|  | 1.95 ~ 2.033V/cell   |                    |         |          |
|  | > 2.033  |                    |         |          |
| Load Information                                   |  |                    |         |          |
| <b>OVER LOAD</b>                                   | Indicates overload.  |                    |         |          |
|  | Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%. |                    |         |          |
|  | 0%~24%   | 25%~49%            | 50%~74% | 75%~100% |
|  |  |                    |         |          |
| Mode Operation Information                         |  |                    |         |          |
|  | Indicates unit connects to the mains.                          |                    |         |          |
|  | Indicates unit connects to the PV panel.                       |                    |         |          |
| <b>BYPASS</b>                                      | Indicates inverter will work in Bypass mode                    |                    |         |          |
| <b>ECO</b>   | Indicates inverter will work in ECO mode                       |                    |         |          |
|  | Indicates the utility charger circuit is working.              |                    |         |          |
|  | Indicates the DC/AC inverter circuit is working.               |                    |         |          |

| Mute Operation  |                                   |
|---|-----------------------------------|
|  | Indicates unit alarm is disabled. |

## LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.

### Setting Programs:

| Program | Description  | Selectable option                       |  |
|---------|--|---|--|
| 00      | Exit setting mode  | Escape<br>00 ESC                        |  |
| 01      | Output source priority:<br>To configure load power source priority | USB : Utility first (default)<br>01 USB | Utility will provide power to the loads as first priority. If Utility energy is unavailable, solar energy and battery provides power the loads.  |
|         |  | SUB: Solar first<br>01 SUB              | Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, utility energy will supply power to the loads at the same time. Battery provides power to the loads only when solar and utility is not sufficient.   |
|         |  | SBU priority<br>01 SBU                  | Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12 or solar and battery is not sufficient. |

|    |  |  |   |
|----|--|--|---|
| 02 | <p>Maximum charging current:<br/>To configure total charging current for solar and utility chargers.<br/>(Max. charging current = utility charging current + solar charging current)</p> | <p>60A (default)<br/>02 60<sup>A</sup></p>             | <p>The setting range is from 10A to 120A for 3K-24 model and from 10A to 140A for 3K-48 and 5K models. Increment of each click is 10A.</p>  |
| 05 | Battery type   | <p>AGM (default)<br/>05 AGM</p>                        | <p>Flooded<br/>05 FLD</p>   |
|    |  | <p>User-Defined<br/>05 USE</p>                         | <p>If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.</p>   |
|    |  | <p>Pylontech battery<br/>05 PYL</p>                    | <p>If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.</p>  |
|    |  | <p>WECO battery<br/>05 WEC</p>                         | <p>If selected, programs of 02, 12, 26, 27 and 29 will be auto-configured per battery supplier recommended. No need for further adjustment. Setting parameters in Programs 12 and 13 parameters change to SOC (State of charge) of battery.</p> |
|    |  | <p>Soltaro battery<br/>05 SOL</p>                      | <p>If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.</p>  |
|    |  | <p>LIb-protocol compatible battery<br/>05 LIB</p>      | <p>Select " LIB" if using Lithium battery compatible to Lib protocol. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.</p>   |
|    |  | <p>3<sup>rd</sup> party Lithium battery<br/>05 LIC</p> | <p>If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting. Please contact the battery supplier for installation procedure.</p>  |



|    |   |   |   |
|----|---|---|---|
| 06 | Auto restart when overload occurs   | Restart disable (default)<br>06 Lfd                 | Restart enable<br>06 LfE  |
| 07 | Auto restart when over temperature occurs   | Restart disable (default)<br>07 tfd                 | Restart enable<br>07 tFE  |
| 09 | Output frequency  | 50Hz (default)<br>09 50 Hz                          | 60Hz<br>09 60 Hz  |
| 10 | Operation Logic   | Automatically (default)<br>10 AUT                   | If selected and utility is available, inverter will work in line mode. Once utility frequency is unstable, inverter will work in bypass mode if bypass function is not forbidden in program 23. |
|    |   | Online mode<br>10 ONL                               | If selected, inverter will work in line mode when utility is available.   |
|    |   | ECO Mode<br>10 ECO                                  | If selected and bypass is not forbidden in program 23, inverter will work in ECO mode when utility is available.  |
| 11 | Maximum utility charging current  | 2A<br>11 2A   | 10A<br>11 10A   |
|    |   | 20A<br>11 20A                                       | 30A (default)<br>11 30A   |
|    |   | 40A<br>11 40A                                       | 50A<br>11 50A   |
|    |   | 60A<br>11 60A                                       |   |
| 12 | Setting voltage point back to utility source when selecting "SBU" (SBU priority) or "SUB" (Solar first) in program 01 | Available options for 24V models:                   |   |
|    |   | Default setting: 23.0V<br>12 BATT 23.0 <sup>v</sup> | The setting range is from 22.0V to 28.5V and increment of each click is 1.0V.   |
|    |   | Available options for 48V models:                   |   |
|    |   | Default setting: 46.0V<br>12 BATT 46 <sup>v</sup>   | The setting range is from 44.0V to 57.0V and increment of each click is 1.0V.   |

|                     |   |   |  |
|---------------------|---|---|--|
|                     |   | If "WECO battery" is selected in program 05   |  |
|                     |   | Default setting: 10%<br>  | The parameter will be fixed at 10% SOC of battery.   |
| 13                  | Setting voltage point back to battery mode when selecting "SBU" (SBU priority) or "SUB" (Solar first) in program 01 | Available options for 24V models.   |  |
|                     |   | Battery fully charged<br>   | The setting range is from 24.0V to 32.0V and increment of each click is 1.0V.  |
|                     |   | 27V (default)<br>   |  |
|                     |   | Available options for 48V models:   |  |
|                     |   | Battery fully charged<br>   | The setting range is from 48.0V to 64.0V and increment of each click is 1.0V.  |
| 54.0V (default)<br> |   |   |  |
|                     |   | If "WECO battery" is selected in program 5  |  |
|                     |   | 15%<br>   | This parameter will refer to the SOC of battery and adjustable from 15 to 100%. Increment of each click is 5%. 15% is default setting. |
| 16                  | Solar energy priority:<br>To configure solar energy priority for battery and load                                   | SBL: Solar energy for battery first<br>UCB: Allow utility to charge battery (Default)<br> | Solar energy charges battery first and allow the utility to charge battery.  |
|                     |   | SBL: Solar energy for battery first<br>UdC: Disallow utility to charge battery<br>        | Solar energy charge battery first and disallow the utility to charge battery.  |

|    |   |   |   |
|----|---|---|---|
| 16 | Solar energy priority:<br>To configure solar energy priority for battery and load | SLb: Solar energy for load first<br>UCb: Allow utility to charge battery<br><br>SLb 16 UCb    | Solar energy provides power to the load first and also allow the utility to charge battery.   |
|    |   | SLb: Solar energy for load first<br>UdC: Disallow utility to charge battery<br><br>SLb 16 UdC | Solar energy provides power to the load first and disallow the utility to charge battery.   |
| 18 | Alarm control   | Alarm on (default)<br>18 60n  | Alarm off<br>18 60f   |
| 19 | Auto return to default display screen   | Return to default display screen (default)<br>19 ESP  | If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute. |
|    |   | Stay at latest screen<br>19 LEP   | If selected, the display screen will stay at latest screen user finally switches.   |
| 20 | Backlight control   | Backlight on (default)<br>20 L0n  | Backlight off<br>20 L0f   |
| 22 | Beeps while primary source is interrupted   | Alarm on (default)<br>22 A0n  | Alarm off<br>22 A0f   |
| 23 | Bypass function:  | Bypass Forbidden<br>23 6yF  | If selected, inverter won't work in bypass/ECO modes.   |
|    |   | Bypass disable<br>23 6yd  | If selected and power ON button is pressed on, inverter can work in bypass/ECO mode only if utility is available.   |
|    |   | Bypass enable (default)<br>23 6yE   | If selected and no matter power ON button is pressed on or not, inverter can work in bypass mode if utility is available.   |

|    |   |   |   |
|----|---|---|---|
| 25 | Record Fault code   | Record enable<br>25 FEN   | Record disable (default)<br>25 FdS  |
| 26 | Bulk charging voltage (C.V voltage)   | <p>24V model default setting: 28.2V</p> <p>C4 26 28.2<sup>BATT</sup>v</p> <hr/> <p>Default setting: 56.4V</p> <p>C4 26 56.4<sup>BATT</sup>v</p> <hr/> <p>If self-defined is selected in program 5, this program can be set up. Setting range is 24.0V to 32V for 24V model and 48.0V to 64.0V for 48V model. Increment of each click is 0.1V.</p> |   |
| 27 | Floating charging voltage   | <p>24V model default to 27.0V</p> <p>FL4 27 27.0<sup>BATT</sup>v</p>  |   |
| 27 | Floating charging voltage   | <p>48V model default setting: 54.0V</p> <p>FL4 27 54.0<sup>BATT</sup>v</p> <hr/> <p>If self-defined is selected in program 5, this program can be set up. Setting range is 24.0V to 32V for 24V model and 48.0V to 64.0V for 48V model. Increment of each click is 0.1V.</p>  |   |
| 28 | <p>AC output mode</p> <p>*This setting is able to set up only when the inverter is in standby mode. Be sure that on/off switch is in "OFF" status</p> | <p>Single:</p> <p>28 <sup>OUTPUT</sup> 510</p>  | <p>When the units are used in parallel with single phase, please select "PAL" in program 28.</p>  |
|    |   | <p>Parallel:</p> <p>28 <sup>OUTPUT</sup> PAL</p>  | <p>It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four inverters in one phase. Please refers to 5-2 for detailed information.</p> |
|    |   | <p>L1 phase:</p> <p>28 <sup>OUTPUT</sup> 3P1</p>  | <p>Please select "3P1" in program 28 for the inverters connected to L1 phase, "3P2" in program 28 for the inverters connected to L2 phase and "3P3" in program 28 for the inverters connected to L3 phase.</p>  |
|    |   | <p>L2 phase:</p> <p>28 <sup>OUTPUT</sup> 3P2</p>  |   |

|    |                                |   |  |
|----|--------------------------------|---|--|
|    |                                | L3 phase:<br>28 <sup>OUTPUT</sup> 3P3   | Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.                                     |
| 29 | Low DC cut-off voltage         | 24V model default setting: 21.0V<br>C04 29 21.0 <sup>BATT</sup> v   |  |
|    |                                | 48V model default setting: 42.0V<br>C04 29 42.0 <sup>BATT</sup> v   |  |
|    |                                | If self-defined is selected in program 5, this program can be set up. Setting range is from 20.0V to 27.0V for 24V model and 40.0V to 54.0V for 48V model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected. |  |
| 32 | Bulk charging time (C.V stage) | Automatically (Default):<br>32 AUT  | If selected, inverter will judge this charging time automatically.   |
|    |                                | 5 min<br>32 5   | If "User-Defined" is selected in program 05, this program can be set up. Setting range is from 5min to 900min. Increment of each click is 5min. Otherwise, Keeping auto-charging time. |
|    |                                | 900 min<br>32 900   |  |
|    |                                | If "USE" is selected in program 05, this program can be set up.   |  |
| 33 | Battery equalization           | Battery equalization enable<br>33 EEN   | Battery equalization disable (default)<br>33 EdS   |
|    |                                | If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.   |  |
| 34 | Battery equalization voltage   | 24V model default setting: 29.2V<br>E4 34 29.2 <sup>BATT</sup> v  |  |
|    |                                | 48V model default setting: 58.4V<br>E4 34 58.4 <sup>BATT</sup> v  |  |
|    |                                | Setting range is 24.0V to 32V for 24V model and 48.0V to 64.0V for 48V model. Increment of each click is 0.1V.  |  |













|    |  |  |  |
|----|--|--|--|
| 35 | Battery equalized time   | 60min (default)<br>35 60   | Setting range is from 5min to 900min. Increment of each click is 5min.   |
| 36 | Battery equalized timeout  | 120min (default)<br>36 120   | Setting range is from 5min to 900 min. Increment of each click is 5 min. |
| 37 | Equalization interval  | 30days (default)<br>37 30d   | Setting range is from 0 to 90 days. Increment of each click is 1 day     |
| 39 | Equalization activated immediately   | Enable<br>39 AEN   | Disable (default)<br>39 AdS  |
|    |  | If equalization function is enabled in program 33, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "EQ". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 37 setting. At this time, "EQ" will not be shown in LCD main page. |  |
| 40 | Reset all stored data for PV generated power and output load energy  | Not reset(Default)<br>40 nft   | Reset<br>40 fSt  |
|    |  |  |  |
| 41 | Firmware upgrade for USB On-the-Go function  | Upgrade disable (Default)<br>41 UFD  | Upgrade enable<br>41 UFE   |
|    |  |  |  |
| 42 | Re-write USB internal parameter  | Re-write function disable (Default)<br>42 HId  | RE-write function enable<br>42 HIE                                       |
|    |  |  |  |
| 43 | Export data log function   | Export log function disable (Default)<br>43 Pdd  | Export log function enable<br>43 PdE                                     |
|    |  |  |  |
| 93 | Erase all data log   | Reset log function disable<br>93 nft   | Reset log function enable<br>93 fSt                                      |
|    |  |  |  |
| 94 | Data log recorded interval<br>*The maximum data log number is 1440. If it's over 1440, it will overwrite as first log. | 3 minutes<br>94 3  | 5 minutes<br>94 5  |
|    |  | 10 minutes(default)<br>94 10   | 20 minutes<br>94 20  |
|    |  | 30 minutes<br>94 30  | 60 minutes<br>94 60  |
| 95 | Time setting – Minute  | n1 n 95 00   | For minute setting, the range is from 00 to 59.                          |

|    |                     |  |  |
|----|---------------------|--|--|
| 96 | Time setting – Hour |  | For hour setting, the range is from 00 to 23.  |
| 97 | Time setting– Day   |  | For day setting, the range is from 00 to 31.   |
| 98 | Time setting– Month |  | For month setting, the range is from 01 to 12. |
| 99 | Time setting – Year |  | For year setting, the range is from 18to 99.   |






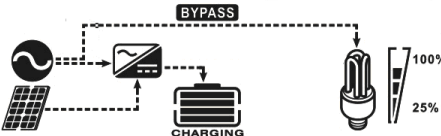
## Display Setting



The LCD display information will be switched in turns by pressing “UP” or “DOWN” key. The selectable information is switched as below order: input voltage, input frequency, PV voltage, MPPT charging current, MPPT charging power, battery voltage, output voltage, output frequency, load percentage, load in VA, load in Watt, DC discharging current, main CPU Version and second CPU Version.

| Selectable information                                   | LCD display                                    |
|--|--|
| Input voltage/Output voltage<br>(Default Display Screen) | <p>Input Voltage=230V, output voltage=230V</p> |
| Input frequency  | <p>Input frequency=50Hz</p>                    |
| PV voltage   | <p>PV voltage=60V</p>                          |
| PV current   | <p>PV current=5.0A</p>                         |





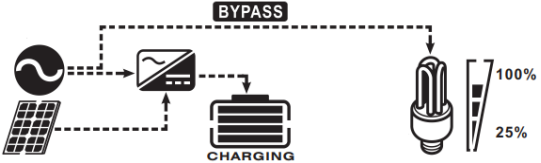
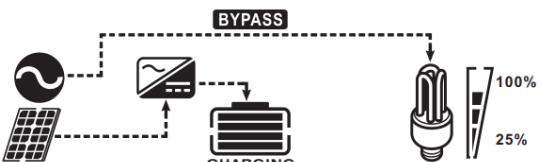
|   |   |
|---|---|
| <p>PV power</p>                           | <p>PV power = 500W</p>                                |
| <p>Charging current</p>                   | <p>charging current=50A</p>                           |
| <p>PV power</p>                           | <p>PV power = 500W</p>                                |
| <p>Battery voltage and output voltage</p> | <p>Battery voltage=50V, output voltage=230V</p>   |
| <p>Output frequency</p>                   | <p>Output frequency=50Hz</p>                      |
| <p>Load percentage</p>                    | <p>Load percent=70%</p>                           |







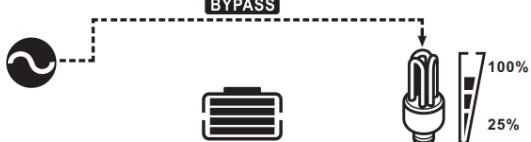


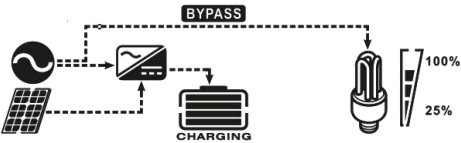
|   |  |
|---|--|
| <p>Load in VA</p>                             | <p>When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.</p> <p style="text-align: center;"> <span style="margin-right: 100px;">BATT</span> <span>LOAD</span><br/> <span style="font-size: 2em;">500</span>v             <span style="font-size: 2em;">350</span>VA           </p>  <p>When load is larger than 1kVA (<math>\geq 1\text{kVA}</math>), load in VA will present x.xkVA like below chart.</p> <p style="text-align: center;"> <span style="margin-right: 100px;">BATT</span> <span>LOAD</span><br/> <span style="font-size: 2em;">500</span>v             <span style="font-size: 2em;">150</span>kVA           </p>  |
| <p>Load in Watt</p>                           | <p>When load is lower than 1kW, load in W will present xxxW like below chart.</p> <p style="text-align: center;"> <span style="margin-right: 100px;">INPUT</span> <span>LOAD</span><br/> <span style="font-size: 2em;">230</span>v             <span style="font-size: 2em;">120</span>kw           </p>  <p>When load is larger than 1kW (<math>\geq 1\text{kW}</math>), load in W will present x.xkW like below chart.</p> <p style="text-align: center;"> <span style="margin-right: 100px;">INPUT</span> <span>LOAD</span><br/> <span style="font-size: 2em;">230</span>v             <span style="font-size: 2em;">120</span>kw           </p>               |
| <p>Battery voltage/DC discharging current</p> | <p>Battery voltage=50V, discharging current=1A</p> <p style="text-align: center;"> <span style="margin-right: 100px;">BATT</span> <span>BATT</span><br/> <span style="font-size: 2em;">500</span>v             <span style="font-size: 2em;">1</span>A           </p>    |
| <p>Main CPU version checking</p>              | <p>Main CPU version 00014.04</p> <p style="text-align: center;"> <span style="font-size: 2em;">01 14 04</span> </p>    |

|                                |  |
|--------------------------------|--|
| Secondary CPU version checking | Secondary CPU version 00003.03<br> |
| SCC version checking           | SCC version 00003.03.<br>          |
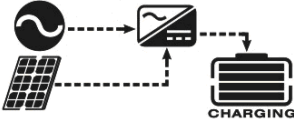
### Operating Mode Description

| Operation mode  | Description  | LCD display  |
|---|--|--|
| Standby mode<br><b>Note:</b><br>*Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output. | No output is supplied by the unit but it still can charge batteries.                             | Charging by utility and PV energy.<br>  |
|   |  | Charging by utility.<br>               |
|   |  | Charging by PV energy.<br>             |
|   |  | No charging.<br>                      |
| Bypass Mode   | The unit will provide output power from the utility. PV energy and utility can charge batteries. | Charging by utility and PV energy.<br> |
|   |  | Charging by PV<br>                     |
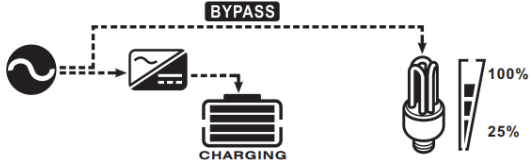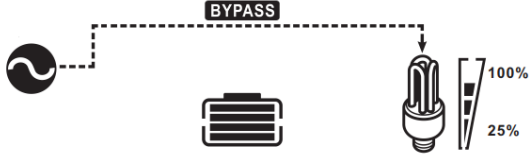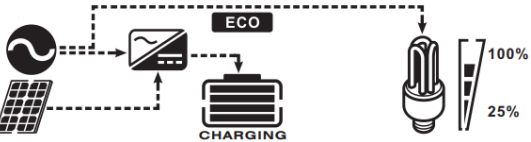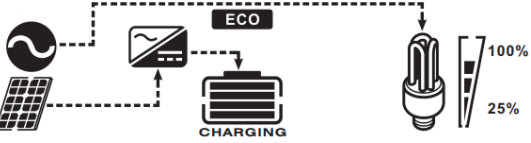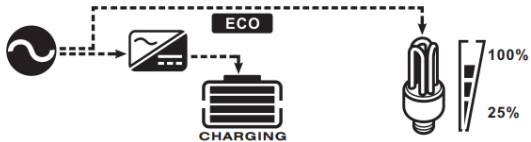
|  |   |  |
|--|---|--|
|  |   | <p>Charging by utility</p>                 |
|  |   | <p>No charging</p>                         |
| <p>ECO Mode</p>  | <p>The unit will provide output power from the utility. PV energy and utility can charge batteries.</p> | <p>Charging by utility and PV energy.</p>  |
|  |   | <p>Charging by PV</p>                     |
|  |   | <p>Charging by utility</p>               |
|  |   | <p>No charging</p>                       |
| <p>Fault mode<br/>Note:<br/>*Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.</p> | <p>Utility can bypass.</p>  | <p>No charging and Bypass</p>            |
|  |   | <p>No charging</p>                      |
|  |   | <p>Charging by utility and PV energy.</p>  |

|                     |   |  |
|---------------------|---|--|
| <p>Line Mode</p>    | <p>The unit will provide output power from the mains. It will also charge the battery at line mode.</p> |  |
| <p>Battery Mode</p> | <p>The unit will provide output power from battery and PV power.</p>                                    | <p>Power from battery and PV energy.</p> <p>Power from battery only.</p> |

### Fault Reference Code

| Fault Code | Fault Event   | Icon on |
|------------|---|---------|
| 01         | Fan is locked when inverter is off.   |         |
| 02         | Over temperature  |         |
| 03         | Battery voltage is too high   |         |
| 04         | Battery voltage is too low  |         |
| 05         | Output short circuited or over temperature is detected by internal converter components.          |         |
| 06         | Output voltage is abnormal. (For 1K/2K/3K model)<br>Output voltage is too high. (For 4K/5K model) |         |
| 07         | Overload time out   |         |
| 08         | Bus voltage is too high   |         |
| 09         | Bus soft start failed   |         |
| 50         | PFC over current  |         |
| 51         | Over current or surge   |         |
| 52         | Bus voltage is too low  |         |
| 53         | Inverter soft start failed  |         |
| 55         | Over DC voltage in AC output  |         |
| 56         | Battery connection is open  |         |
| 57         | Current sensor failed   |         |
| 58         | Output voltage is too low   |         |

## Warning Indicator

| Warning Code | Warning Event   | Audible Alarm                 | Icon flashing |
|--------------|---|-------------------------------|---------------|
| 01           | Fan is locked when inverter is on.                      | Beep three times every second |               |
| 02           | Over temperature  | None                          |               |
| 03           | Battery is over-charged                                 | Beep once every second        |               |
| 04           | Low battery   | Beep once every second        |               |
| 07           | Overload  | Beep once every 0.5 second    |               |
| 10           | Output power derating                                   | Beep twice every 3 seconds    |               |
| 72           | No USB disk is detected.                                | None                          |               |
| 73           | USB disk is protected from copying.                     | None                          |               |
| 74           | Document inside the USB disk contains the wrong format. | None                          |               |
| E9           | Battery equalization                                    | None                          |               |

## Battery Equalization

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


### ● How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 37.
2. Active equalization immediately in program 39.


### ● When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

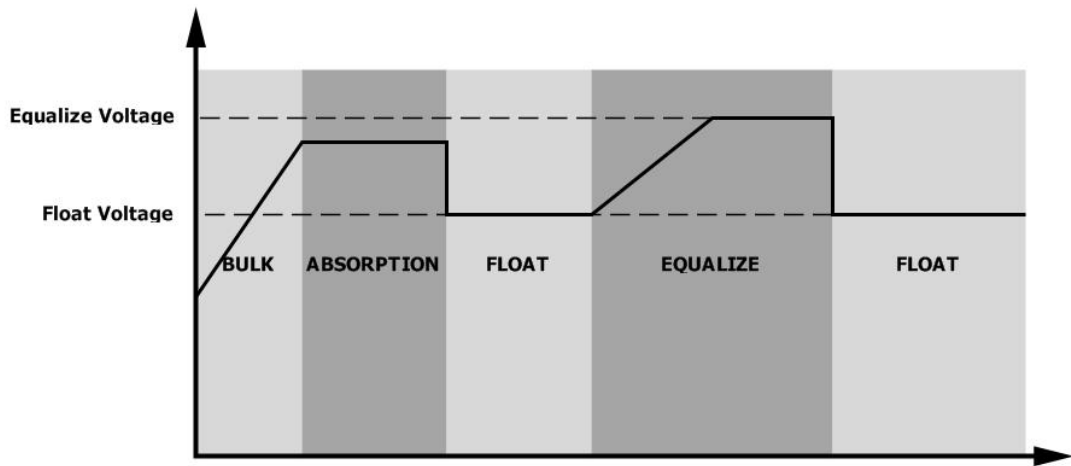


● **Equalize charging time and timeout**

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

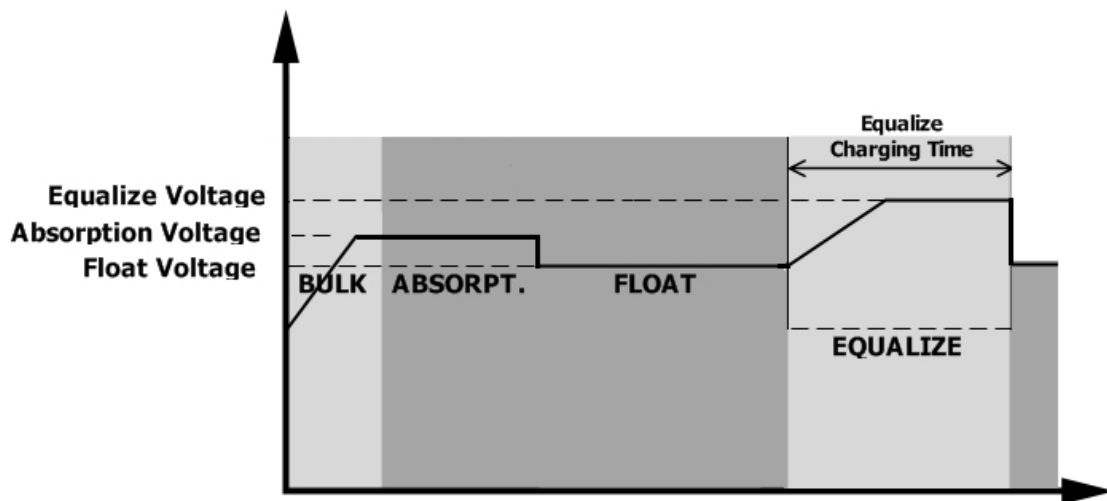

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

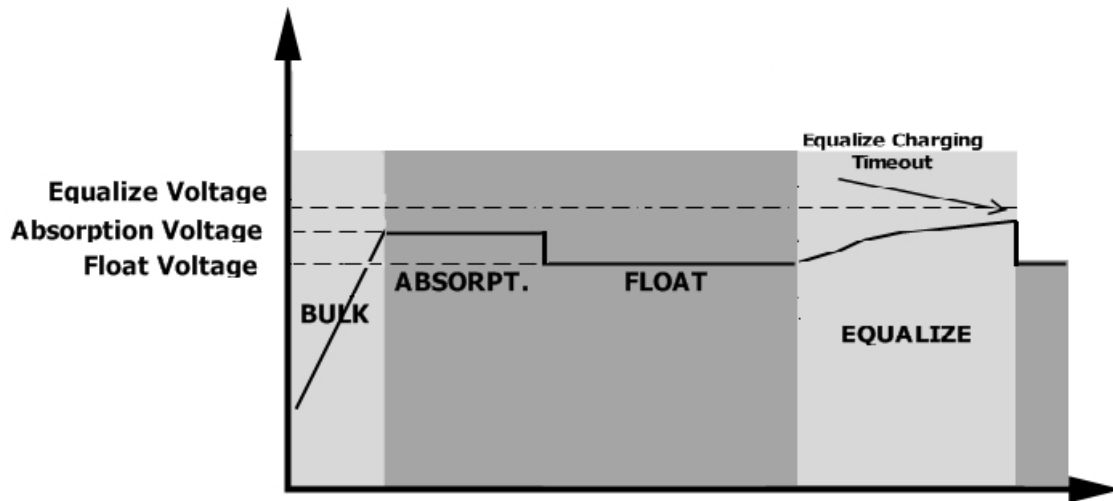

## SPECIFICATIONS

Table 1 Line Mode Specifications

| INVERTER MODEL                         | 3KW-24V   | 3KW-48V | 5KW |
|--|---|---------|-----|
| <b>Input Voltage Waveform</b>          | Sinusoidal  |         |     |
| <b>Nominal Input Voltage</b>           | 230Vac  |         |     |
| <b>Low Loss Voltage</b>                | 110Vac±7V   |         |     |
| <b>Low Loss Return Voltage</b>         | 120Vac±7V   |         |     |
| <b>High Loss Voltage</b>               | 280Vac±7V   |         |     |
| <b>High Loss Return Voltage</b>        | 270Vac±7V   |         |     |
| <b>Max AC Input Voltage</b>            | 300Vac  |         |     |
| <b>Nominal Input Frequency</b>         | 50Hz / 60Hz (Auto detection)                                    |         |     |
| <b>Low Loss Frequency</b>              | 46(56)±1Hz  |         |     |
| <b>Low Loss Return Frequency</b>       | 46.5(57)±1Hz  |         |     |
| <b>High Loss Frequency</b>             | 54(64)±1Hz  |         |     |
| <b>High Loss Return Frequency</b>      | 53(63)±1Hz  |         |     |
| <b>Power Factor</b>                    | >0.98   |         |     |
| <b>Output Short Circuit Protection</b> | Line mode: Circuit Breaker<br>Battery mode: Electronic Circuits |         |     |
| <b>Efficiency (Line Mode)</b>          | 93% (Peak Efficiency)   |         |     |
| <b>Transfer Time</b>                   | Line mode←→Battery mode 0ms<br>Inverter←→Bypass 4ms             |         |     |


Table 2 Battery Mode Specifications

| INVERTER MODEL   | 3KW-24V                           | 3KW-48V            | 5KW      |
|--|-----------------------------------|--------------------|----------|
| <b>Rated Output Power</b>  | 3KVA/3KW                          | 3KVA/3KW           | 5KVA/5KW |
| <b>Output Voltage Waveform</b>                                       | Pure Sine Wave                    |                    |          |
| <b>Output Voltage Regulation</b>                                     | 230Vac±5%                         |                    |          |
| <b>Output Frequency</b>  | 50Hz or 60Hz                      |                    |          |
| <b>Peak Efficiency</b>   | 90%                               |                    |          |
| <b>Overload Protection</b>   | 5s@≥150% load; 10s@105%~150% load |                    |          |
| <b>Surge Capacity</b>  | 2* rated power for 5 seconds      |                    |          |
| <b>Nominal DC Input Voltage</b>                                      | 24Vdc                             | 48Vdc              |          |
| <b>Operating Range</b>   | 20Vdc -34Vdc                      | 40Vdc -66Vdc       |          |
| <b>Cold Start Voltage</b>  | 23Vdc                             | 46Vdc              |          |
| <b>Low DC Warning Voltage</b><br>@ load < 50%<br>@ load ≥ 50%        | 22.5Vdc<br>22.0Vdc                | 45.0Vdc<br>44.0Vdc |          |
| <b>Low DC Warning Return Voltage</b><br>@ load < 50%<br>@ load ≥ 50% | 23.5Vdc<br>23.0Vdc                | 47.0Vdc<br>46.0Vdc |          |
| <b>Low DC Cut-off Voltage</b><br>@ load < 50%<br>@ load ≥ 50%        | 21.5Vdc<br>21.0Vdc                | 43.0Vdc<br>42.0Vdc |          |
| <b>High DC Recovery Voltage</b>                                      | 32Vdc                             | 64Vdc              |          |
| <b>High DC Cut-off Voltage</b>                                       | 34Vdc                             | 66Vdc              |          |
| <b>No Load Power Consumption</b>                                     | <75W                              | <75W               |          |

Table 3 Charge Mode Specifications

| Utility Charging Mode                              |                          |         |         |
|--|--------------------------|---------|---------|
| INVERTER MODEL                                     | 3KW-24V                  | 3KW-48V | 5KW     |
| <b>Charging Current</b><br>@ Nominal Input Voltage | Default: 30A, max: 60A   |         |         |
| <b>Bulk Charging Voltage</b>                       | <b>Flooded Battery</b>   | 29.2Vdc | 58.4Vdc |
|  | <b>AGM / Gel Battery</b> | 28.2Vdc | 56.4Vdc |
| <b>Floating Charging Voltage</b>                   | 27Vdc                    | 54Vdc   |         |
| <b>Overcharge Protection</b>                       | 34Vdc                    | 66Vdc   |         |
| <b>Charging Algorithm</b>                          | 3-Step                   |         |         |



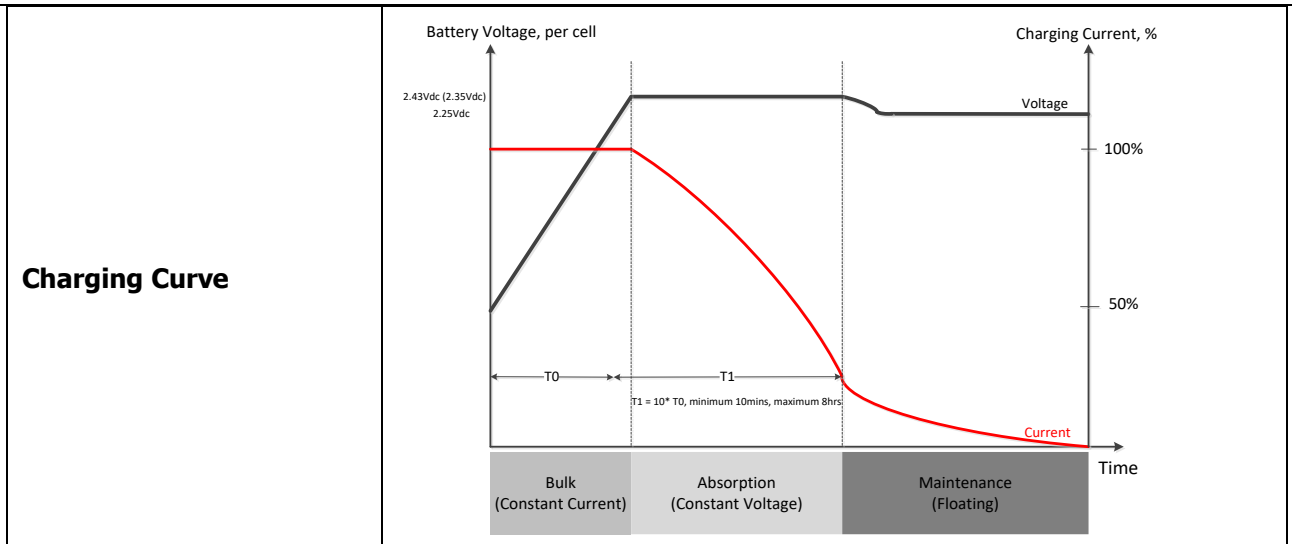

| Solar Charging Mode (MPPT type)    |            |           |           |
|------------------------------------|------------|-----------|-----------|
| INVERTER MODEL                     | 3KW-24V    | 3KW-48V   | 5KW       |
| Rated Power                        | 1500W      | 4000W     | 4000W     |
| Maximum charging current           | 60A        | 80A       | 80A       |
| Efficiency                         | 98.0% max. |           |           |
| Max. PV Array Open Circuit Voltage | 145Vdc     |           |           |
| PV Array MPPT Voltage Range        | 30~115Vdc  | 60~115Vdc | 60~115Vdc |
| Battery Voltage Accuracy           | +/-0.3%    |           |           |
| PV Voltage Accuracy                | +/-2V      |           |           |
| Charging Algorithm                 | 3-Step     |           |           |
| Joint Utility and Solar Charging   |            |           |           |
| Max Charging Current               | 120A       | 140A      | 140A      |
| Default Charging Current           | 60A        |           |           |

Table 4 ECO/Bypass Mode Specifications

| <b>Bypass Mode</b>                |                              |                |            |
|-----------------------------------|------------------------------|----------------|------------|
| <b>INVERTER MODEL</b>             | <b>3KW-24V</b>               | <b>3KW-48V</b> | <b>5KW</b> |
| <b>Input Voltage Waveform</b>     | Sinusoidal                   |                |            |
| <b>Low Loss Voltage</b>           | 176Vac±7V                    |                |            |
| <b>Low Loss Return Voltage</b>    | 186Vac±7V                    |                |            |
| <b>High Loss Voltage</b>          | 280Vac±7V                    |                |            |
| <b>High Loss Return Voltage</b>   | 270Vac±7V                    |                |            |
| <b>Nominal Input Frequency</b>    | 50Hz / 60Hz (Auto detection) |                |            |
| <b>Low Loss Frequency</b>         | 46(56)±1Hz                   |                |            |
| <b>Low Loss Return Frequency</b>  | 46.5(57)±1Hz                 |                |            |
| <b>High Loss Frequency</b>        | 54(64)±1Hz                   |                |            |
| <b>High Loss Return Frequency</b> | 53(63)±1Hz                   |                |            |

Table 5 General Specifications

| <b>INVERTER MODEL</b>              | <b>3KW-24V</b>                               | <b>3KW-48V</b> | <b>5KW</b> |
|------------------------------------|--|----------------|------------|
| <b>SCC type</b>                    | <b>MPPT</b>                                  |                |            |
| <b>Parallel-able</b>               | YES  |                |            |
| <b>Communication</b>               | RS232 and WiFi                               |                |            |
| <b>Safety Certification</b>        | CE   |                |            |
| <b>Operating Temperature Range</b> | 0°C to 55°C                                  |                |            |
| <b>Storage temperature</b>         | -15°C~ 60°C                                  |                |            |
| <b>Humidity</b>                    | 5% to 95% Relative Humidity (Non-condensing) |                |            |
| <b>Dimension (D*W*H), mm</b>       | 466.3 x 438 x 130.8                          |                |            |
| <b>Net Weight, kg</b>              | 14.5   | 14.5           | 15         |

## TROUBLE SHOOTING

| Problem   | LCD/LED/Buzzer  | Explanation / Possible cause  | What to do   |
|---|---|---|--|
| Unit shuts down automatically during startup process.                         | LCD/LEDs and buzzer will be active for 3 seconds and then complete off. | The battery voltage is too low (<1.91V/Cell)  | 1. Re-charge battery.<br>2. Replace battery.   |
| No response after power on.   | No indication.  | 1. The battery voltage is far too low. (<1.4V/Cell)<br>2. Battery polarity is connected reversed. | 1. Check if batteries and the wiring are connected well.<br>2. Re-charge battery.<br>3. Replace battery.   |
| Mains exist but the unit works in battery mode.                               | Input voltage is displayed as 0 on the LCD and green LED is flashing.   | Input protector is tripped  | Check if AC breaker is tripped and AC wiring is connected well.  |
|   | Green LED is flashing.  | Insufficient quality of AC power. (Shore or Generator)  | 1. Check if AC wires are too thin and/or too long.<br>2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance) |
|   | Green LED is flashing.  | Set "Solar First" as the priority of output source.   | Change output source priority to Utility first.  |
| When the unit is turned on, internal relay is switched on and off repeatedly. | LCD display and LEDs are flashing                                       | Battery is disconnected.  | Check if battery wires are connected well.   |
| Buzzer beeps continuously and red LED is on.                                  | Fault code 07   | Overload error. The inverter is overload 110% and time is up.                                     | Reduce the connected load by switching off some equipment.   |
|   | Fault code 05   | Output short circuited.   | Check if wiring is connected well and remove abnormal load.  |
|   | Fault code 02   | Internal temperature of inverter component is over 100°C.   | Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.  |
|   | Fault code 03   | Battery is over-charged.  | Return to repair center.   |
|   |   | The battery voltage is too high.  | Check if spec and quantity of batteries are meet requirements.   |
|   | Fault code 01   | Fan fault   | Replace the fan.   |
|   | Fault code 06/58  | Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)                     | 1. Reduce the connected load.<br>2. Return to repair center  |
|   | Fault code 08/09/53/57  | Internal components failed.   | Return to repair center.   |
|   | Fault code 50   | PFC over current or surge.  | Restart the unit, if the error happens again, please return to repair center.  |
|   | Fault code 51   | OP over current or surge.   |  |
|   | Fault code 52   | Bus voltage is too low.   |  |
| Fault code 55   | Output voltage is unbalanced.   |   |  |
| Fault code 56   | Battery is not connected well or fuse is burnt.                         | If the battery is connected well, please return to repair center.                                 |  |

# PARALLEL FUNCTION

## 1. Introduction


This inverter can be used in parallel for two applications.

1. Parallel operation in single phase with up to 9 units. The supported maximum output power is 27KW/27KVA for 3KW model and 45KW/45KVA for 5KW model.
2. Maximum 9 units work together to support three-phase equipment. Seven units support one phase maximum. For 3KW model, the supported maximum output power is 27KW/27KVA and one phase can be up to 21KW/21KVA. For 5KW model, the supported maximum output power is 45KW/45KVA and one phase can be up to 35KW/35KVA.

**NOTE:** If this unit is bundled with share current cable and parallel cable, this inverter is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

## 2. Package Contents

In parallel kit, you will find the following items in the package:

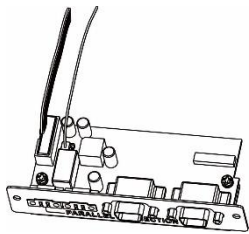

Parallel board




Parallel communication cable




Current sharing cable

## 3. Parallel board installation


**Step 1:** Take out parallel cover by removing two screws as below chart and remove 2-pin and 14-pin cables.

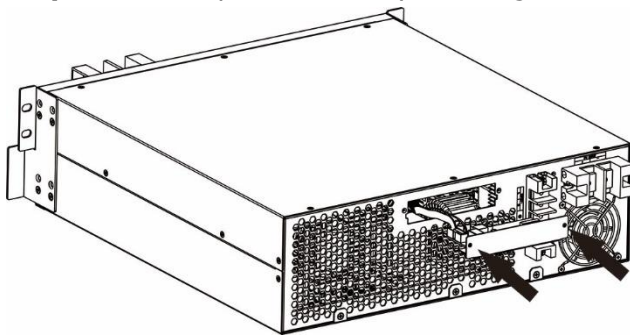


**Step 2:** Replace it with parallel board.

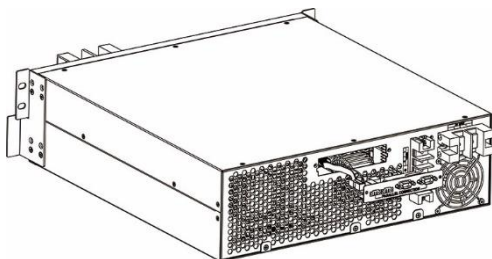

**Step 3:** Re-connect 2-pin and 14-pin to original position on parallel board as shown below chart.

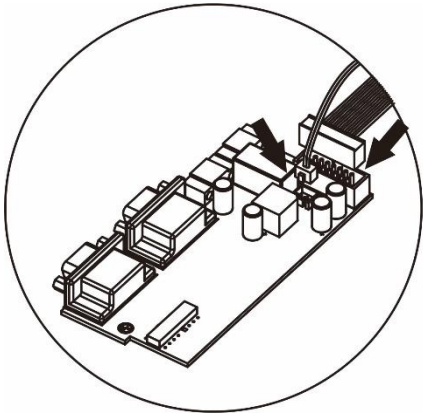

**Step 4:** Put parallel cover back to the unit. Now the inverter is providing parallel operation function.

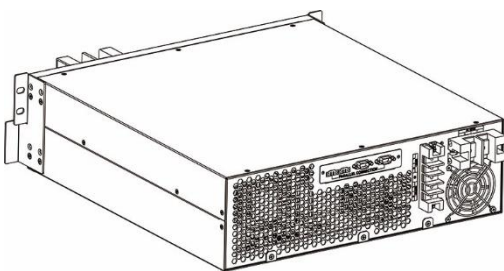


#### 4. Wiring Connection

The cable size of each inverter is shown as below:

**Recommended battery cable and terminal size for each inverter:**

| Model   | Wire Size | Cable mm <sup>2</sup> | Ring Terminal |        | Torque value |
|---------|-----------|-----------------------|---------------|--------|--------------|
|         |           |                       | Dimensions    |        |              |
|         |           |                       | D (mm)        | L (mm) |              |
| 3KW-24V | 1*1/0AWG  | 60                    | 8.4           | 49.7   | 4.5 Nm       |
|         | 2*4AWG    | 44                    | 8.4           | 49.7   |              |
| 3KW-48V | 1*4AWG    | 22                    | 6.4           | 33.2   | 4.5 Nm       |
| 5KW     | 1*1/0AWG  | 60                    | 8.4           | 49.7   | 4.5 Nm       |
|         | 2 * 4AWG  | 44                    | 8.4           | 49.7   |              |

**Ring terminal:**

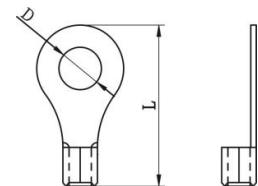

**WARNING:** Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.

**Recommended AC input and output cable size for each inverter:**

| Model           | AWG no. | Torque    |
|-----------------|---------|-----------|
| 3KW-24V/3KW-48V | 10 AWG  | 1.4~1.6Nm |
| 5KW             | 8 AWG   | 1.4~1.6Nm |

**CAUTION!! Please make sure the output neutral of each unit is connected together. Otherwise, it may cause the inverter fail.**

You need to connect the cables of each inverter together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. "X"

indicates the number of inverters connected in parallel.

Regarding AC input and output, please also follow the same principle.

**CAUTION!!** Please install the breaker at the battery and AC input side. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5-1 and 5-2.

**Recommended breaker specification of battery for each inverter:**

| Model   | 1 unit*    |
|---------|------------|
| 3KW-24V | 150A/60VDC |
| 3KW-48V | 80A/80VDC  |
| 5KW     | 125A/80VDC |

\*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit. "X" indicates the number of inverters connected in parallel.

**Recommended breaker specification of AC input:**

| Model           | 2 units | 3 units | 4 units | 5 units | 6 units | 7 units | 8 units | 9 units |
|-----------------|---------|---------|---------|---------|---------|---------|---------|---------|
| 3KW-24V/3KW-48V | 80A     | 120A    | 160A    | 200A    | 240A    | 280A    | 320A    | 360A    |
| 5KW             | 100A    | 150A    | 200A    | 250A    | 300A    | 350A    | 400A    | 450A    |

**Note1:** Also, you can use 40A breaker for 3KW and 50A for 5KW for only 1 unit and install one breaker at its AC input in each inverter.

**Note2:** Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units

**Recommended battery capacity**

| Inverter parallel numbers | 2     | 3      | 4      | 5      | 6      | 7      | 8      | 9      |
|---------------------------|-------|--------|--------|--------|--------|--------|--------|--------|
| Battery Capacity          | 800AH | 1200AH | 1600AH | 2000AH | 2400AH | 2800AH | 3200AH | 3600AH |

**WARNING!** Be sure that all inverters will share the same battery bank. Otherwise, the inverters will transfer to fault mode.

**PV Connection**


Please refer to user manual of single unit for PV Connection.

**CAUTION:** Each inverter should connect to PV modules separately.


### 4-1. Parallel Operation in Single phase

Two inverters in parallel:

#### Power Connection

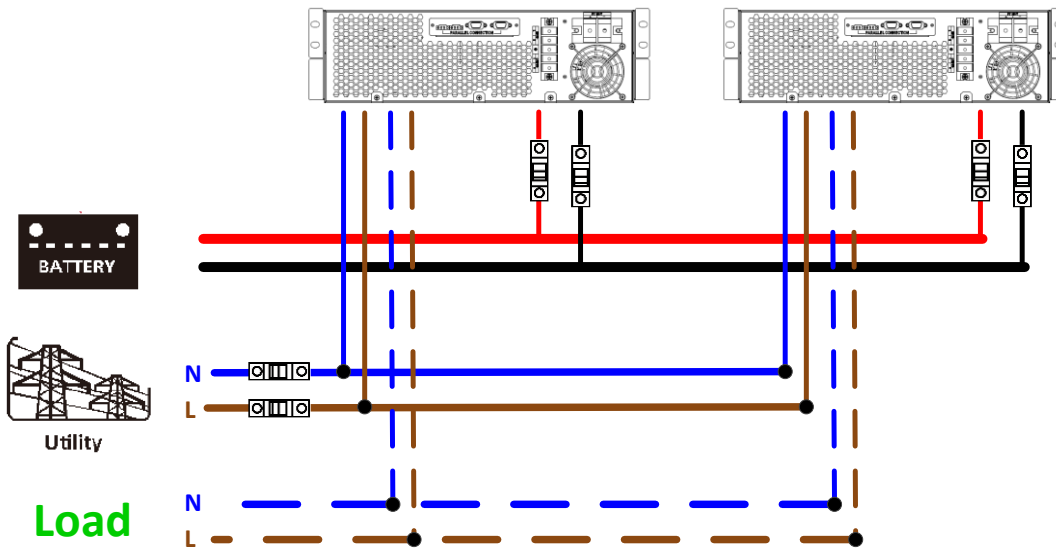


#### Communication Connection




Three inverters in parallel:

#### Power Connection

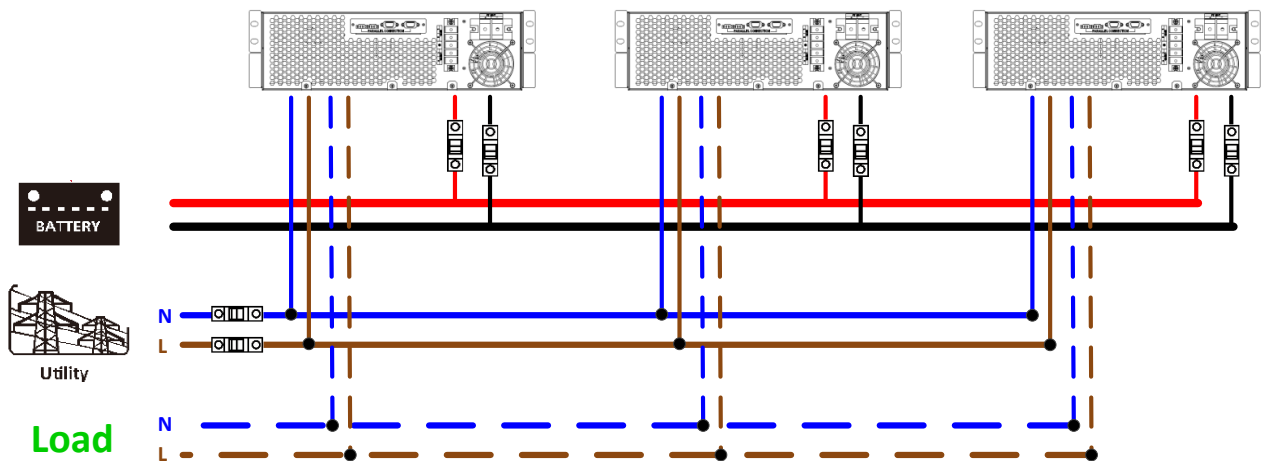


#### Communication Connection

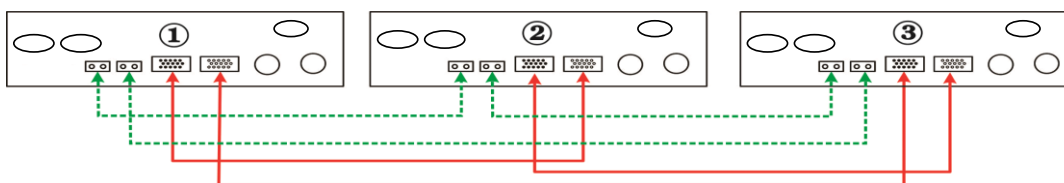


Four inverters in parallel:

**Power Connection**

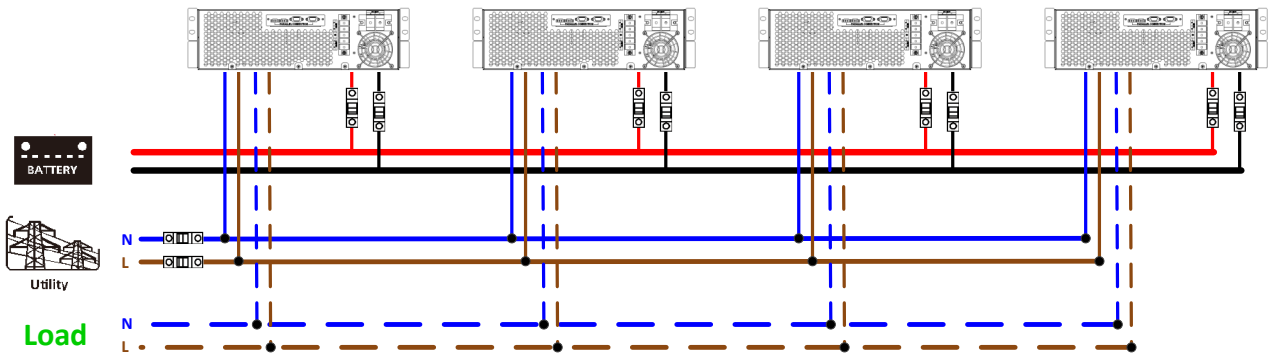


**Communication Connection**

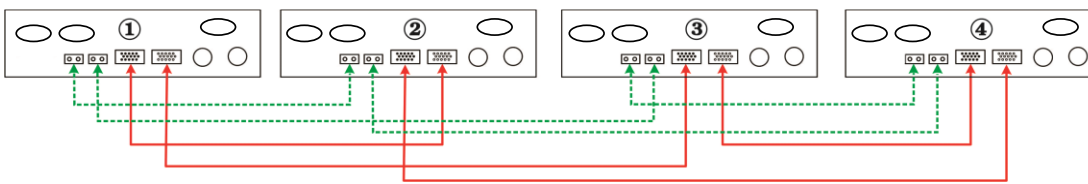


Five inverters in parallel:

**Power Connection**

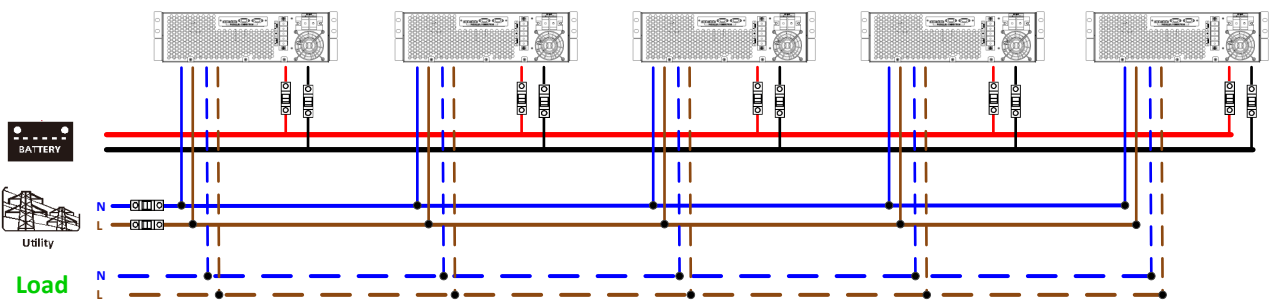


**Communication Connection**

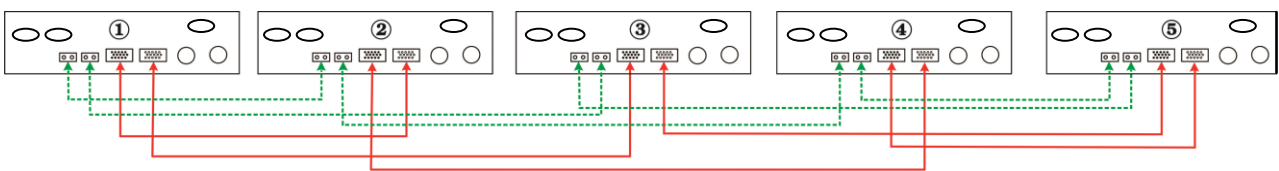


Six inverters in parallel:

**Power Connection**

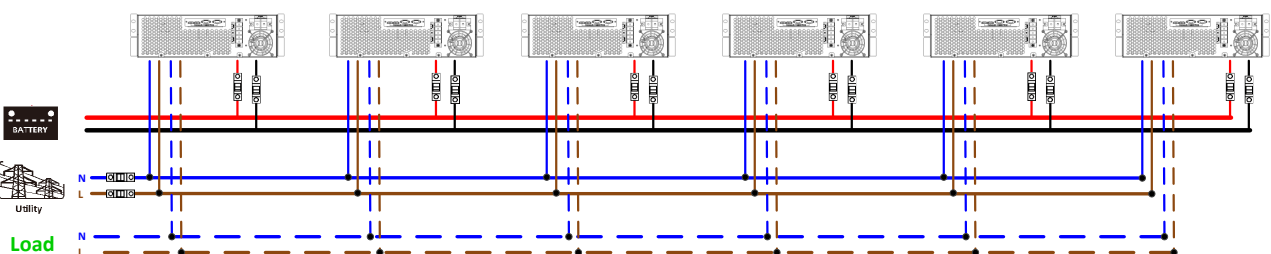




**Communication Connection**

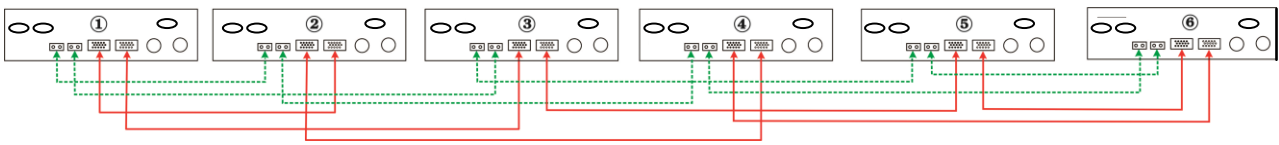


Seven inverters in parallel:

**Power Connection**

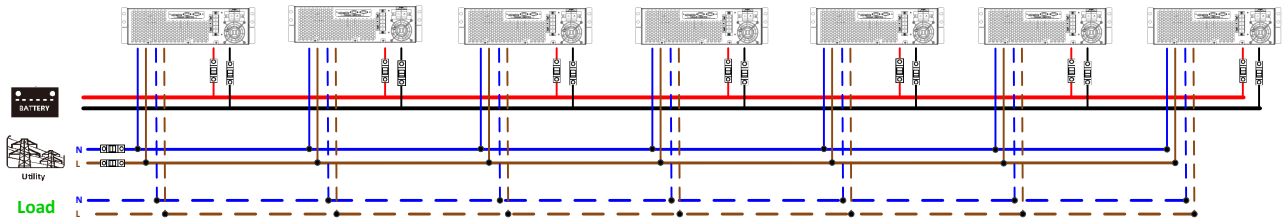


**Communication Connection**

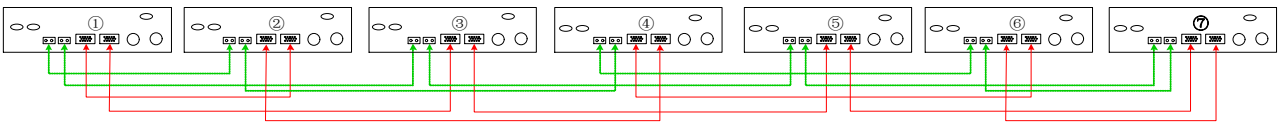


Eight inverters in parallel:

**Power Connection**

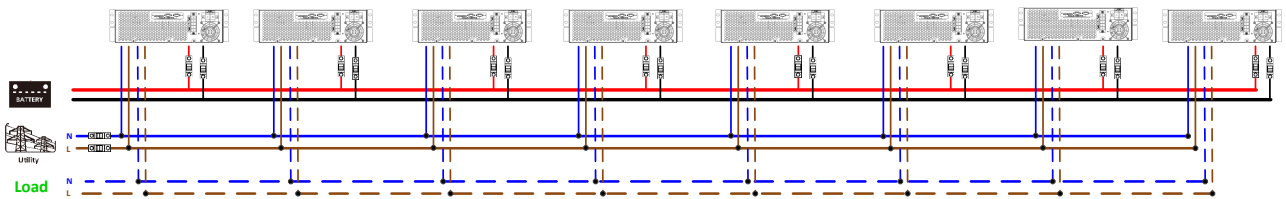


**Communication Connection**




Nine inverters in parallel:

**Power Connection**

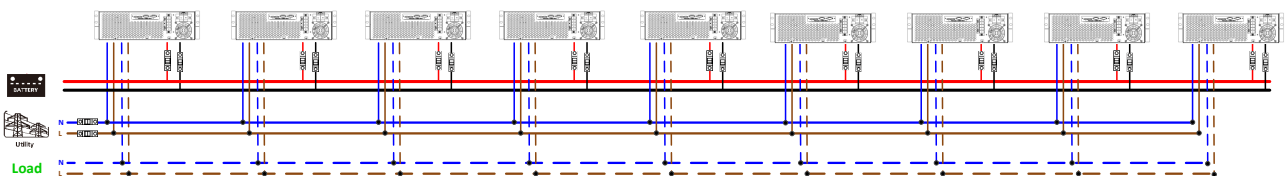


### Communication Connection




### 4-2. Support 3-phase equipment

Three inverters in each phase:

#### Power Connection

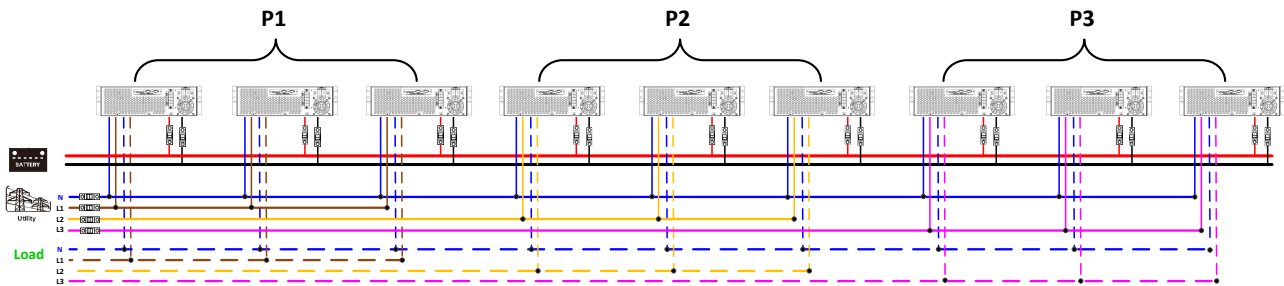


#### Communication Connection

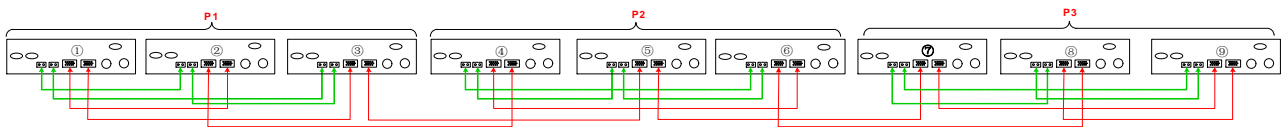


**WARNING:** Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

Two inverters in each phase:

#### Power Connection

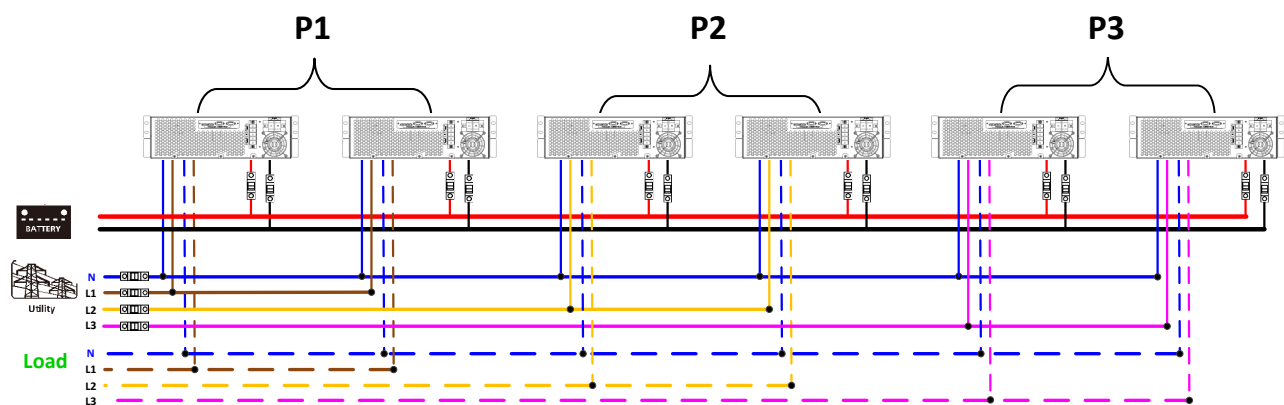


#### Communication Connection

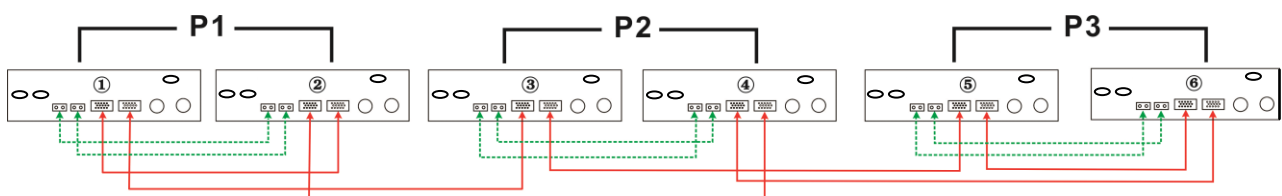

Seven inverters in one phase and one inverter for the other two phases:


**Power Connection**

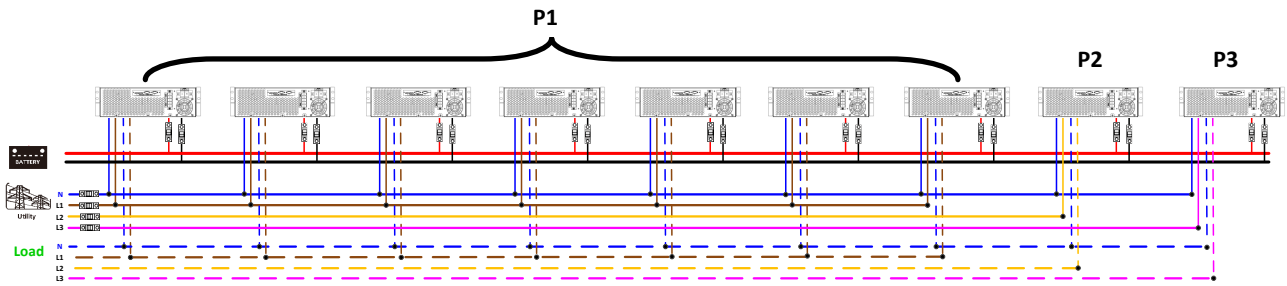

**Note:** It's up to customer's demand to pick 7 inverters on any phase.


P1: L1-phase, P2: L2-phase, P3: L3-phase.

**Communication Connection**

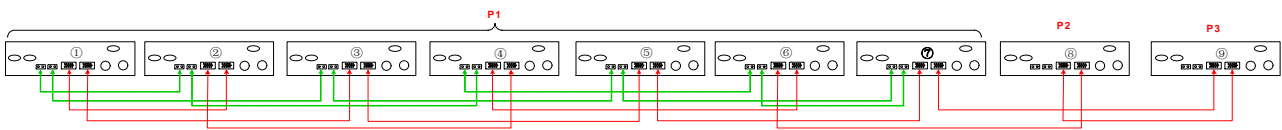


**Note:** If there is only one unit in one phase, this unit doesn't need to connect the current sharing cable.

Or you connect it like as below:

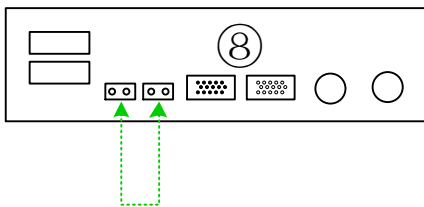

Four inverters in one phase and one inverter for the other two phases:


**Power Connection**

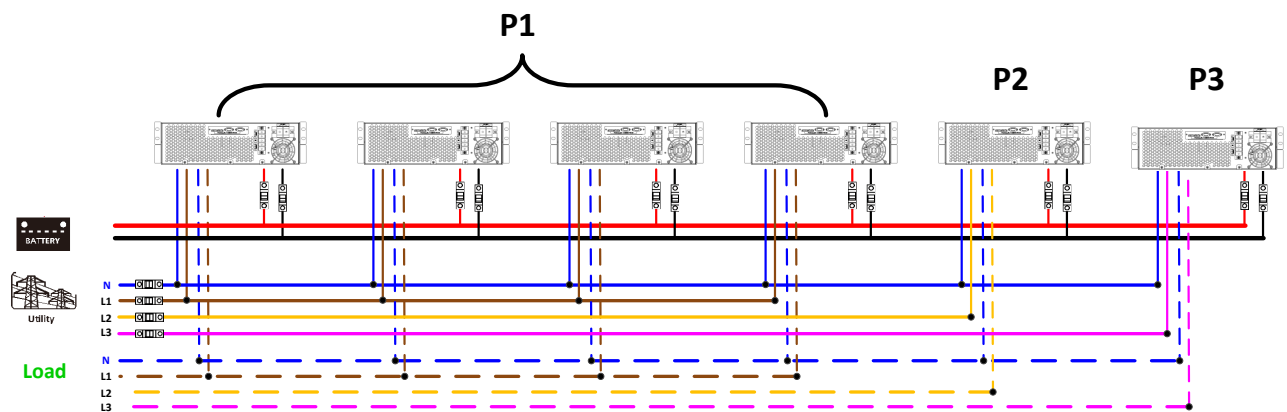

**Note:** It's up to customer's demand to pick 4 inverters on any phase.


P1: L1-phase, P2: L2-phase, P3: L3-phase.

### Communication Connection

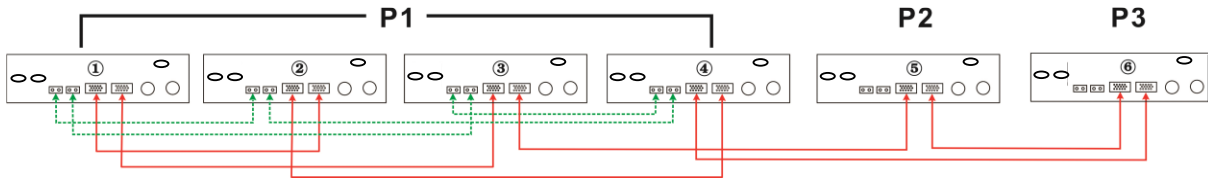


Three inverters in one phase, two inverters in second phase and one inverter for the third phase:

### Power Connection

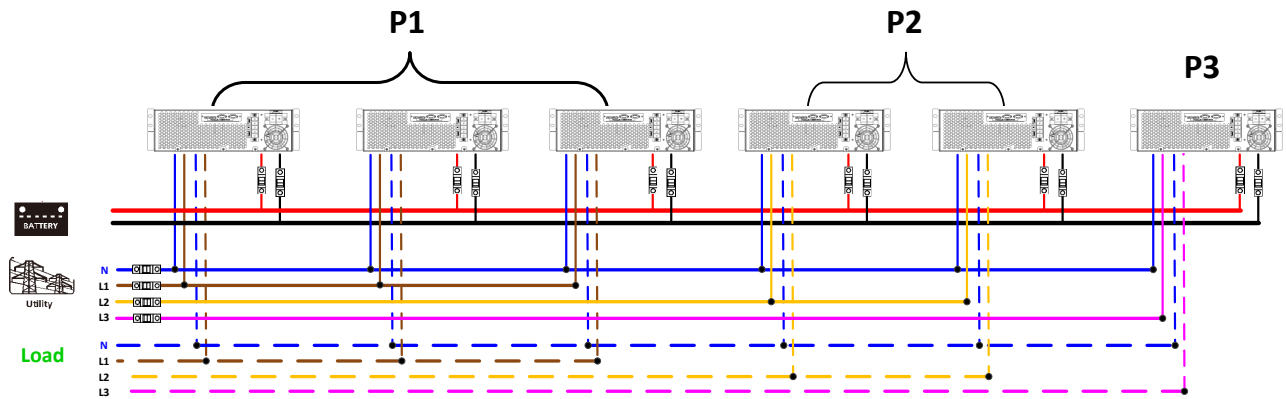


### Communication Connection

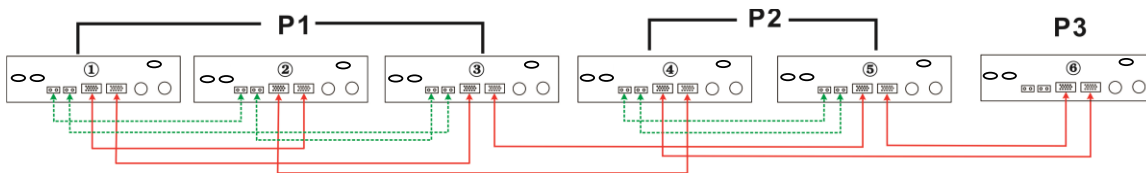


Three inverters in one phase and only one inverter for the remaining two phases:

### Power Connection

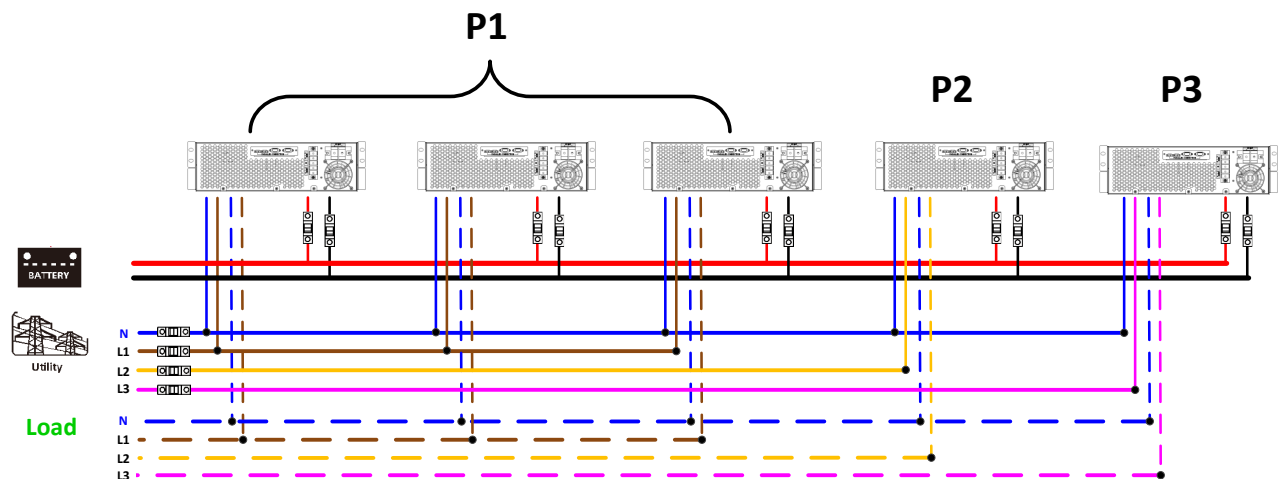


### Communication Connection

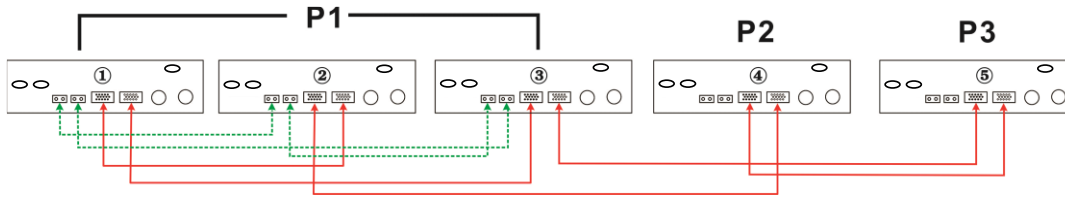


Two inverters in two phases and only one inverter for the remaining phase:

**Power Connection**

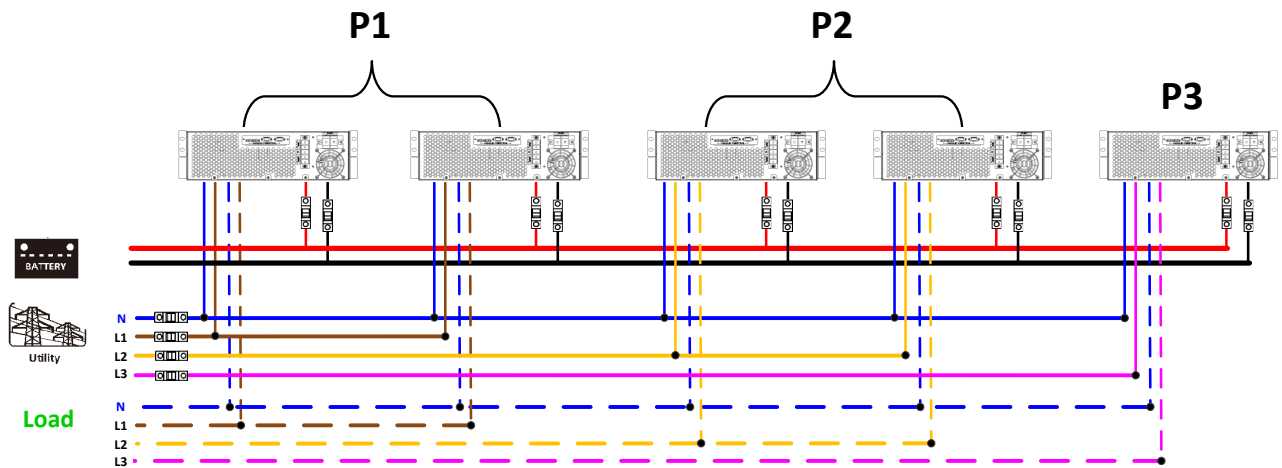


**Communication Connection**

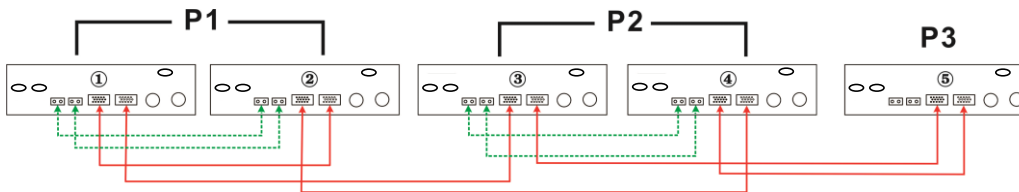


Two inverters in one phase and only one inverter for the remaining phases:

**Power Connection**

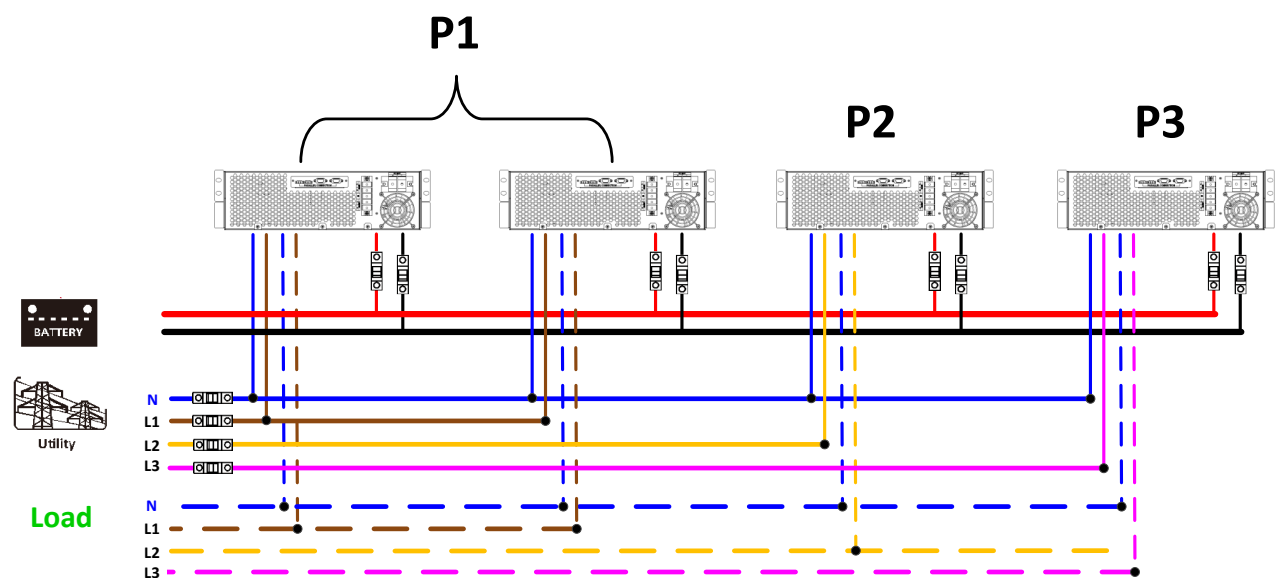


### Communication Connection

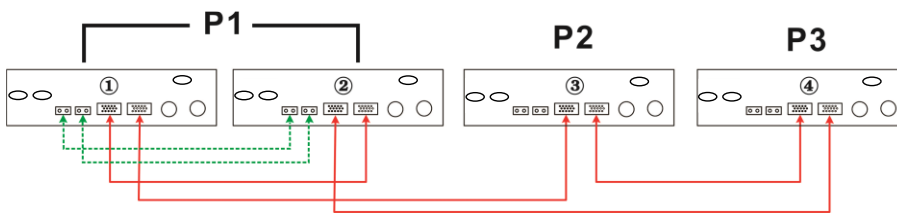


One inverter in each phase:

### Power Connection

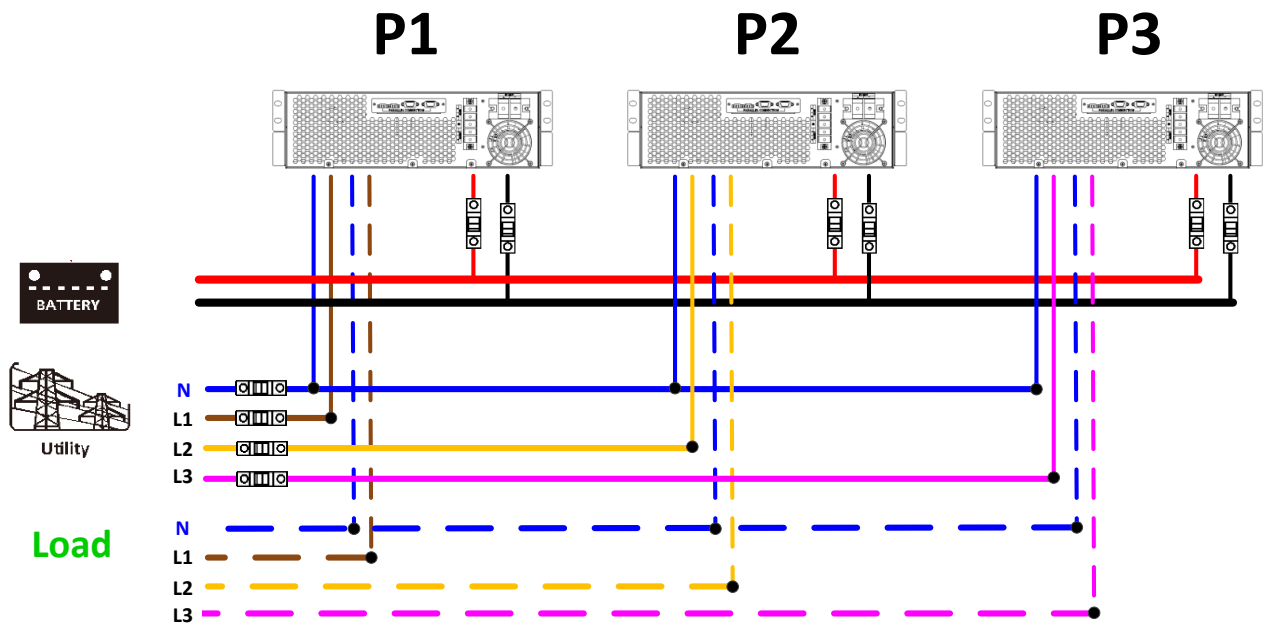

### Communication Connection

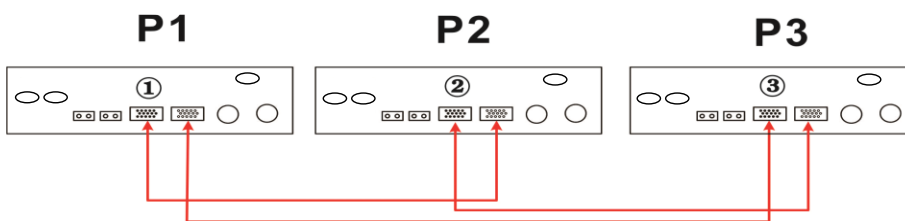

**WARNING:** Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

## 5. LCD Setting and Display

### Setting Program:

| Program | Description   | Selectable option |   |
|---------|---|-------------------|---|
| 28      | AC output mode<br>*This setting is able to set up only when the inverter is in standby mode. Be sure that on/off switch is in "OFF" status. | Single:<br>       | When the unit is operated alone, please select "SIG" in program 28.   |
|         |   | Parallel:<br>     | When the units are used in parallel for single phase application, please select "PAL" in program 28. Please refer to 5-1 for detailed information.  |
|         |   | L1 phase:<br>     | When the units are operated in 3-phase application, please choose "3PX" to define each inverter. It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four inverters in one phase. Please refers to 5-2 for detailed information. Please select "3P1" in program 28 for the inverters connected to L1 phase, "3P2" in program 28 for the inverters connected to L2 phase and "3P3" in program 28 for the inverters connected to L3 phase. |
|         |   | L2 phase:<br>     |   |
|         |   | L3 phase:<br>     | Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable between units on different phases.  |

### Fault code display:

| Fault Code | Fault Event                   | Icon on |
|------------|-------------------------------|---------|
| 60         | Power feedback protection     |         |
| 71         | Firmware version inconsistent |         |
| 72         | Current sharing fault         |         |
| 80         | CAN fault                     |         |
| 81         | Host loss                     |         |
| 82         | Synchronization loss          |         |

|    |   |  |
|----|---|--|
| 83 | Battery voltage detected different                |  |
| 84 | AC input voltage and frequency detected different |  |
| 85 | AC output current unbalance                       |  |
| 86 | AC output mode setting is different               |  |

## 6. Commissioning

### Parallel in single phase

Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 28 of each unit. And then shut down all units.

**NOET:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on each unit.

| LCD display in Master unit | LCD display in Slave unit |
|----------------------------|---------------------------|
|                            |                           |
|                            |                           |

**NOTE:** Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all inverters connect to utility at the same time. If detecting AC connection, they will work normally.

| LCD display in Master unit | LCD display in Slave unit |
|----------------------------|---------------------------|
|                            |                           |
|                            |                           |

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

### Support three-phase equipment

Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.


Step 2: Turn on all units and configure LCD program 28 as P1, P2 and P3 sequentially. And then shut down all units.


**NOET:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.


Step 3: Turn on all units sequentially.

|                              |                              |                              |
|------------------------------|------------------------------|------------------------------|
| LCD display in L1-phase unit | LCD display in L2-phase unit | LCD display in L3-phase unit |
|------------------------------|------------------------------|------------------------------|



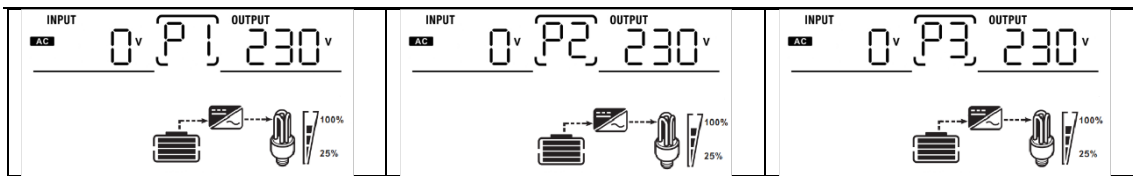

Step 4: Switch on all AC breakers of Line wires in AC input. If AC connection is detected and three phases are matched with unit setting, they will work normally. Otherwise, the AC icon  will flash and they will not work in line mode.

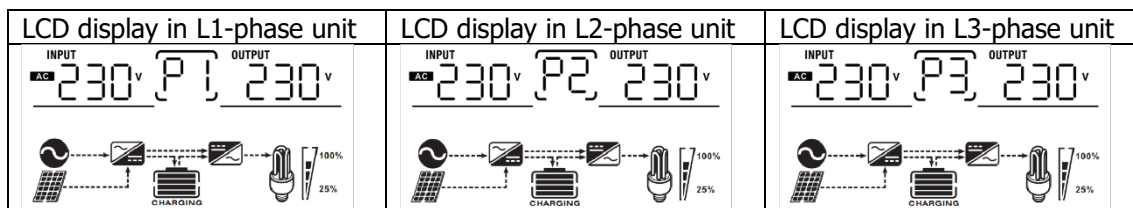

Step 5: If there is no more fault alarm, the system to support 3-phase equipment is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Note 1: To avoid overload occurring, before turning on breakers in load side, it's better to have whole system in operation first.

Note 2: Transfer time for this operation exists. Power interruption may happen to critical devices, which cannot bear transfer time.

## 7. Trouble shooting

| Situation  |  |       | Solution  |
|------------|--|-------|---|
| Fault Code | Fault Description                                      | Event |   |
| 60         | Current feedback into the inverter is detected.        |       | <ol style="list-style-type: none"> <li>Restart the inverter.</li> <li>Check if L/N cables are not connected reversely in all inverters.</li> <li>For parallel system in single phase, make sure the sharing are connected in all inverters.<br/>For supporting three-phase system, make sure the sharing cables are connected in the inverters in the same phase, and disconnected in the inverters in different phases.</li> <li>If the problem remains, please contact your installer.</li> </ol> |
| 71         | The firmware version of each inverter is not the same. |       | <ol style="list-style-type: none"> <li>Update all inverter firmware to the same version.</li> <li>Check the version of each inverter via LCD setting and make sure the CPU versions are same. If not, please contact your installer to provide the firmware to update.</li> <li>After updating, if the problem still remains, please contact your installer.</li> </ol>   |
| 72         | The output current of each inverter is different.      |       | <ol style="list-style-type: none"> <li>Check if sharing cables are connected well and restart the inverter.</li> <li>If the problem remains, please contact your installer.</li> </ol>  |
| 80         | CAN data loss  |       | <ol style="list-style-type: none"> <li>Check if communication cables are connected well and restart the inverter.</li> <li>If the problem remains, please contact your installer.</li> </ol>  |
| 81         | Host data loss   |       |   |
| 82         | Synchronization data loss                              |       |   |
| 83         | The battery voltage of each inverter is not the same.  |       | <ol style="list-style-type: none"> <li>Make sure all inverters share same groups of batteries together.</li> <li>Remove all loads and disconnect AC input and PV input. Then, check battery voltage of all inverters. If the values from all inverters are close, please check if all battery cables are the same length and</li> </ol>   |

|    |  |   |
|----|--|---|
|    |  | <p>same material type. Otherwise, please contact your installer to provide SOP to calibrate battery voltage of each inverter.</p> <p>3. If the problem still remains, please contact your installer.</p>  |
| 84 | AC input voltage and frequency are detected different. | <p>1. Check the utility wiring connection and restart the inverter.</p> <p>2. Make sure utility starts up at same time. If there are breakers installed between utility and inverters, please be sure all breakers can be turned on AC input at same time.</p> <p>3. If the problem remains, please contact your installer.</p> |
| 85 | AC output current unbalance                            | <p>1. Restart the inverter.</p> <p>2. Remove some excessive loads and re-check load information from LCD of inverters. If the values are different, please check if AC input and output cables are in the same length and material type.</p> <p>3. If the problem remains, please contact your installer.</p>                   |
| 86 | AC output mode setting is different.                   | <p>1. Switch off the inverter and check LCD setting #28.</p> <p>2. For parallel system in single phase, make sure no 3P1, 3P2 or 3P3 is set on #28.<br/>For supporting three-phase system, make sure no "PAL" is set on #28.</p> <p>3. If the problem remains, please contact your installer.</p>                               |

## Appendix A: Approximate Back-up Time Table

| Model   | Load (VA) | Backup Time @24Vdc 200Ah (min) | Backup Time @24Vdc 400Ah (min) |
|---------|-----------|--------------------------------|--------------------------------|
| 3KW-24V | 300       | 898                            | 2200                           |
|         | 600       | 444                            | 1050                           |
|         | 900       | 249                            | 606                            |
|         | 1200      | 190                            | 454                            |
|         | 1500      | 136                            | 328                            |
|         | 1800      | 112                            | 252                            |
|         | 2100      | 96                             | 216                            |
|         | 2400      | 70                             | 188                            |
|         | 2700      | 62                             | 148                            |
|         | 3000      | 56                             | 134                            |

| Model           | Load (VA) | Backup Time @ 48Vdc 200Ah (min) | Backup Time @ 48Vdc 400Ah (min) |
|-----------------|-----------|---------------------------------|---------------------------------|
| 3KW-48V,<br>5KW | 500       | 1226                            | 2576                            |
|                 | 1000      | 536                             | 1226                            |
|                 | 1500      | 316                             | 804                             |
|                 | 2000      | 222                             | 542                             |
|                 | 2500      | 180                             | 430                             |
|                 | 3000      | 152                             | 364                             |
|                 | 3500      | 130                             | 282                             |
|                 | 4000      | 100                             | 224                             |
|                 | 4500      | 88                              | 200                             |
|                 | 5000      | 80                              | 180                             |

**Note:** Backup time depends on the quality of the battery, age of battery and type of battery. Specifications of batteries may vary depending on different manufacturers.

# Appendix B: BMS Communication Installation

## 1. Introduction


If connecting to lithium battery, it is recommended to purchase a custom-made RJ45 communication cable. Please check with your dealer or integrator for details.

This custom-made RJ45 communication cable delivers information and signal between lithium battery and the inverter. These information are listed below:

- Re-configure charging voltage, charging current and battery discharge cut-off voltage according to the lithium battery parameters.
- Have the inverter start or stop charging according to the status of lithium battery.


## 2. Pin Assignment for BMS Communication Port

|       | Definition |
|-------|------------|
| PIN 1 | RS232TX    |
| PIN 2 | RS232RX    |
| PIN 3 | RS485B     |
| PIN 4 | NC         |
| PIN 5 | RS485A     |
| PIN 6 | CANH       |
| PIN 7 | CANL       |
| PIN 8 | GND        |

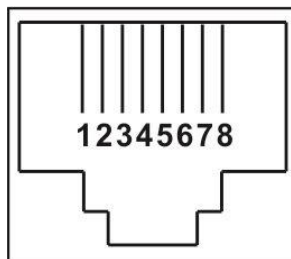

## 3. Lithium Battery Communication Configuration

### PYLONTECH

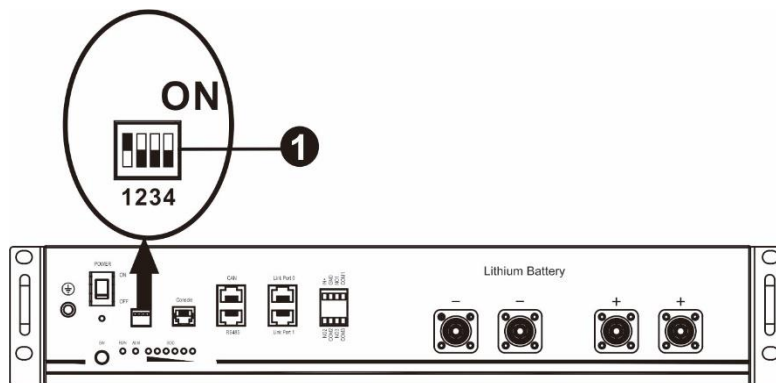

Dip Switch: There are 4 Dip Switches that sets different baud rate and battery group address. If switch position is turned to the "OFF" position, it means "0". If switch position is turned to the "ON" position, it means "1".

Dip 1 is "ON" to represent the baud rate 9600.

Dip 2, 3 and 4 are to set up battery group address.

Dip switch 2, 3 and 4 on master battery (first battery) are to set up or change the group address.

**NOTE:** "1" is upper position and "0" is bottom position.

| Dip 1  | Dip 2 | Dip 3 | Dip 4 | Group address   |
|--|-------|-------|-------|---|
| 1: RS485<br>baud<br>rate=9600<br><br><b>Restart to<br/>take effect</b> | 0     | 0     | 0     | Single group only. It's necessary to set up master battery with this setting and slave batteries are unrestricted.                            |
|  | 1     | 0     | 0     | Multiple group condition. It's necessary to set up master battery on the first group with this setting and slave batteries are unrestricted.  |
|  | 0     | 1     | 0     | Multiple group condition. It's necessary to set up master battery on the second group with this setting and slave batteries are unrestricted. |
|  | 1     | 1     | 0     | Multiple group condition. It's necessary to set up master battery on the third group with this setting and slave batteries are unrestricted.  |
|  | 0     | 0     | 1     | Multiple group condition. It's necessary to set up master battery on the fourth group with this setting and slave batteries are unrestricted. |
|  | 1     | 0     | 1     | Multiple group condition. It's necessary to set up master battery on the fifth group with this setting and slave batteries are unrestricted.  |


**NOTE:** The maximum groups of lithium battery is 5 and for maximum number for each group, please check with battery manufacturer.

#### 4. Installation and Operation

##### **PYLONTECH**

After configuration, please install LCD panel with inverter and Lithium battery with the following steps.


Step 1. Use custom-made RJ45 cable to connect inverter and Lithium battery.

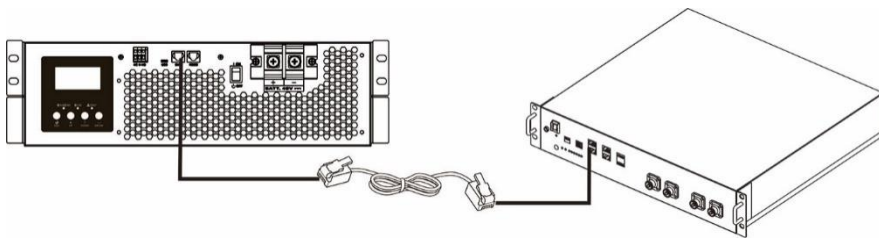


##### **Note for parallel system:**

1. Only support common battery installation.
2. Use custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set this inverter battery type to "PYL" in LCD program 5. Others should be "USE".


Step 2. Switch on Lithium battery.

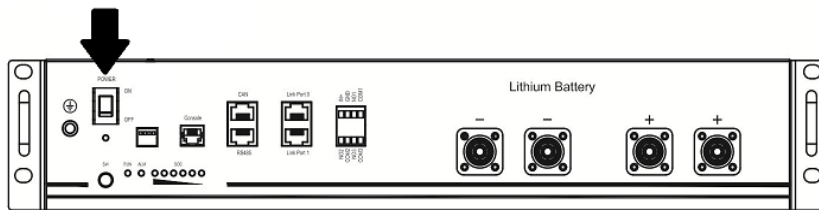


Step 3. Press more than three seconds to start Lithium battery, power output ready.

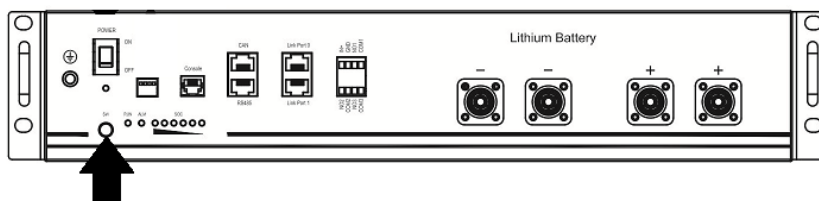

Step 4. Turn on the inverter.

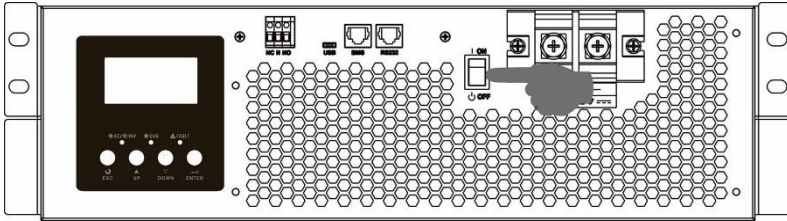


Step 5. Be sure to select battery type as "PYL" in LCD program 5.



**WECO**


Step 1. Use custom-made RJ45 cable to connect inverter and Lithium battery.

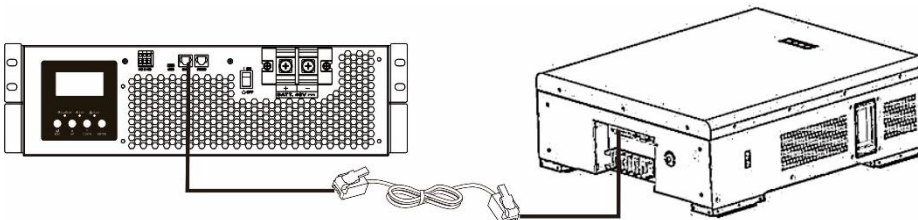


**Note for parallel system:**

1. Only support common battery installation.
2. Use custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set this inverter battery type to "WEC" in LCD program 5. Others should be "USE".

Step 2. Switch on Lithium battery.

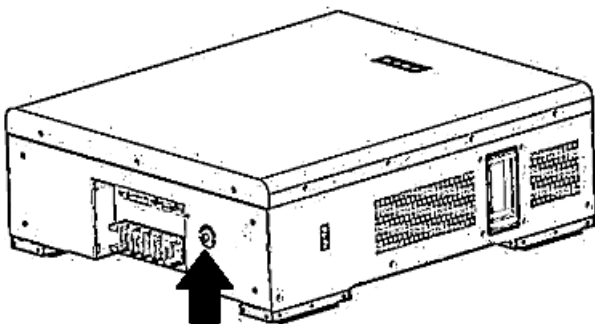

Step 3. Turn on the inverter.

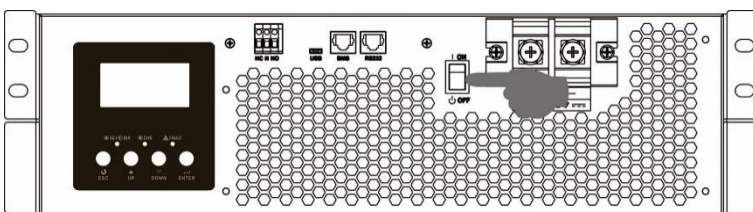


Step 4. Be sure to select battery type as "WEC" in LCD program 5.



**SOLTARO**


Step 1. Use custom-made RJ45 cable to connect inverter and Lithium battery.

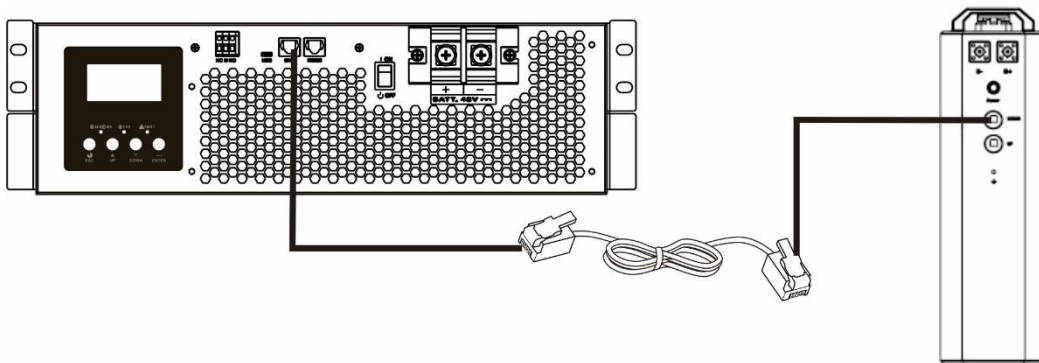


**Note for parallel system:**

1. Only support common battery installation.
2. Use custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set this inverter battery type to "SOL" in LCD program 5. Others should be "USE".

Step 2. Open DC isolator and switch on Lithium battery.

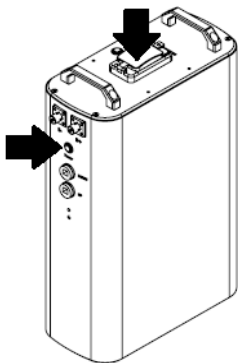

Step 3. Turn on the inverter.

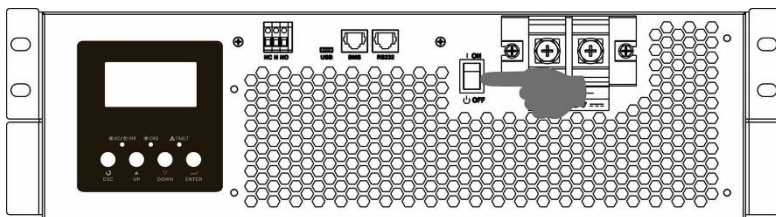


Step 4. Be sure to select battery type as "SOL" in LCD program 5.



**5. LCD Display Information**

Press "UP" or "DOWN" key to switch LCD display information. It will show battery pack and battery group number before "Main CPU version checking" as below screen.

| Selectable information                       | LCD display   |
|--|---|
| Battery pack numbers & Battery group numbers | Battery pack numbers = 3, battery group numbers = 1 |

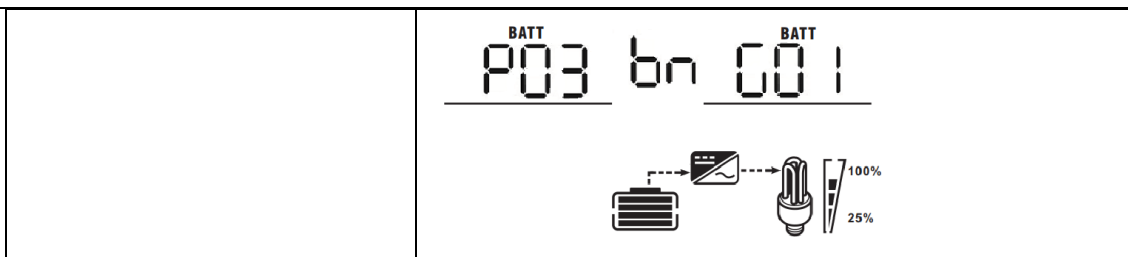

**6. Code Reference**

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

| Code | Description  | Action   |
|------|--|--|
|      | If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.  |  |
|      | Communication lost (only available when the battery type is setting as "Pylontech Battery" or "WECO Battery" or "Soltaro Battery" or "BAK Battery".)<br><ul style="list-style-type: none"> <li>After battery is connected, communication signal is not detected for 3 minutes, buzzer will beep. After 10 minutes, inverter will stop charging and discharging to lithium battery.</li> <li>Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.</li> </ul> |  |
|      | Battery number is changed. It probably is because of communication lost between battery packs.   | Press "UP" or "DOWN" key to switch LCD display until below screen shows. It will have battery number re-checked and 62 warning code will be clear.<br> |
|      | If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.  |  |
|      | If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.   |  |
|      | If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop charging battery.   |  |




# Appendix C: The Wi-Fi Operation Guide in Remote Panel

## 1. Introduction

Wi-Fi module can enable wireless communication between off-grid inverters and monitoring platform. Users have complete and remote monitoring and controlling experience for inverters when combining Wi-Fi module with WatchPower APP, available for both iOS and Android based device. All data loggers and parameters are saved in iCloud.

The major functions of this APP:

- Delivers device status during normal operation.
- Allows to configure device setting after installation.
- Notifies users when a warning or alarm occurs.
- Allows users to query inverter history data.

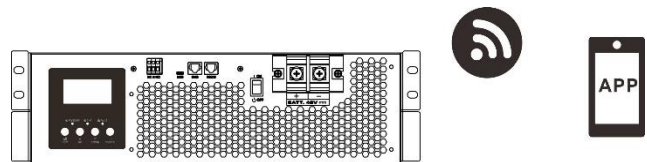

## 2. WatchPower App

### 2-1. Download and install APP

**Operating system requirement for your smart phone:**

🍏 iOS system supports iOS 9.0 and above

🤖 Android system supports Android 5.0 and above

Please scan the following QR code with your smart phone and download WatchPower App.



Android system





iOS system


Or you may find "WatchPower" app from the Apple® Store or "WatchPower Wi-Fi" in Google® Play Store.



### 2-2. Initial Setup


Step 1: Registration at first time

After the installation, please tap the shortcut icon  to access this APP on your mobile screen. In the screen, tap "Register" to access "User Registration" page. Fill in all required information and scan the remote box PN by tapping  icon. Or you can simply enter PN directly. Then, tap "Register" button.

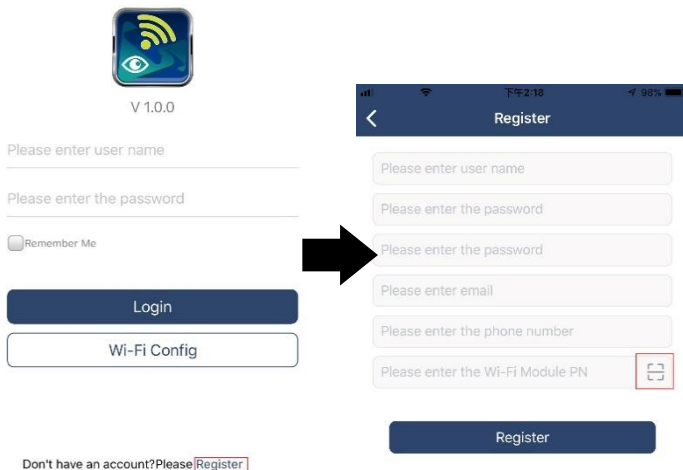




Then, a "Registration success" window will pop up. Tap "Go now" to continue setting local Wi-Fi network connection.

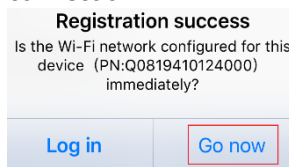


### Step 2: Local Wi-Fi Module Configuration

Now, you are in "Wi-Fi Config" page. There are detailed setup procedure listed in "How to connect?" section and you may follow it to connect Wi-Fi.

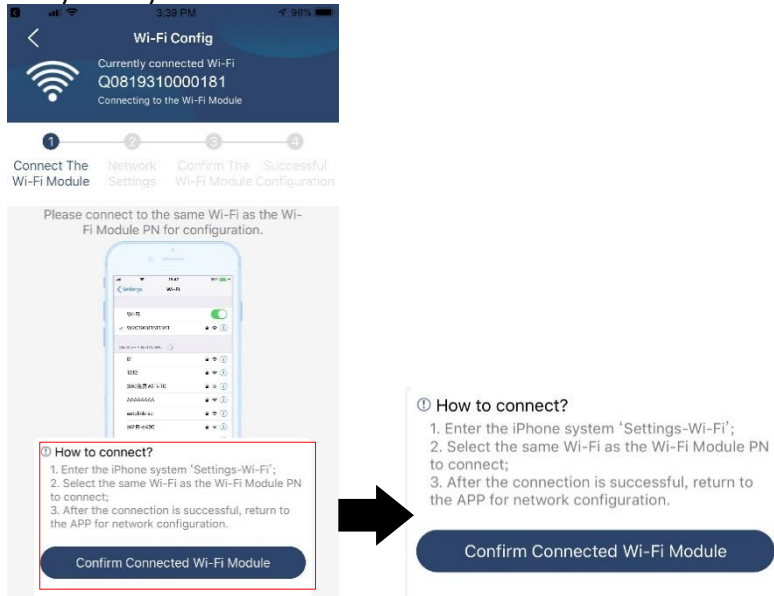


Enter the "Settings→Wi-Fi" and select connected Wi-Fi name. The connected Wi-Fi name is the same to your Wi-Fi PN number and enter default password "12345678".

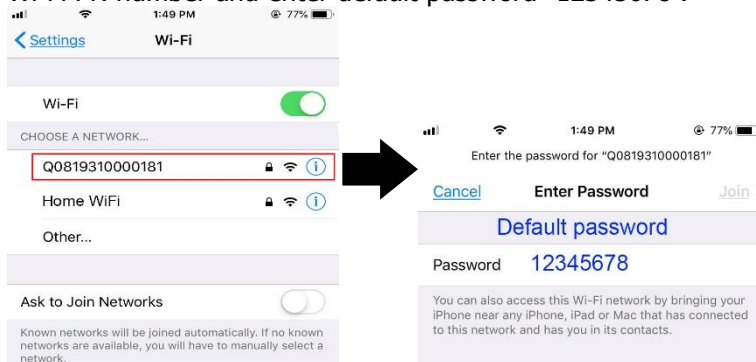


Then, return to WatchPower APP and tap "Confirm Connected Wi-Fi Module" button when Wi-Fi module is connected successfully.

### Step 3: Wi-Fi Network settings

Tap  icon to select your local Wi-Fi router name (to access the internet) and enter password.

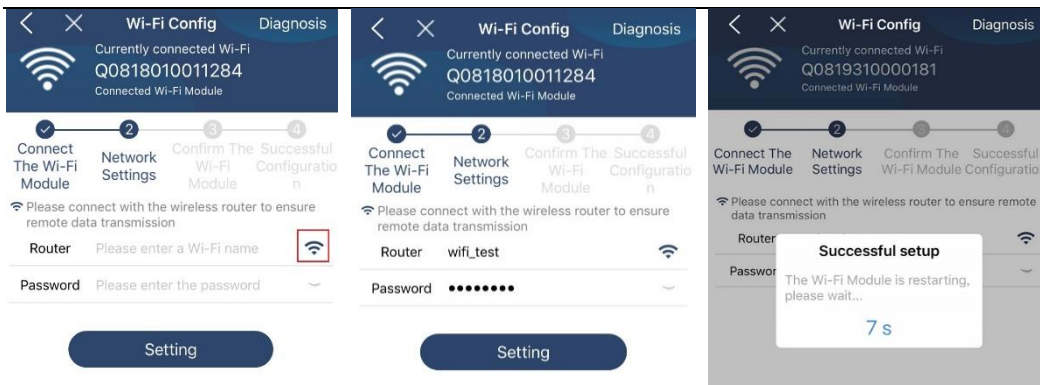

Step 4: Tap "Confirm" to complete the Wi-Fi configuration between the Wi-Fi module and the Internet.

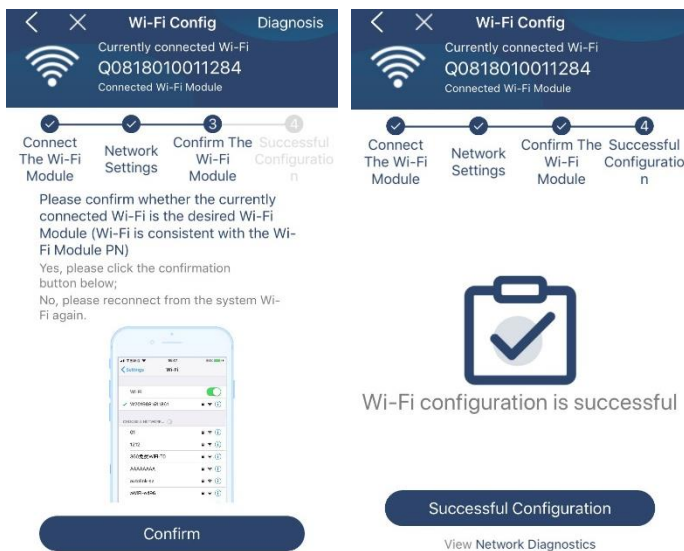


If the connection fails, please repeat Step 2 and 3.



### Diagnose Function

If the module is not monitoring properly, please tap "Diagnosis" on the top right corner of the screen for further details. It will show repair suggestion. Please follow it to fix the problem. Then, repeat the steps in the chapter 4.2 to re-set network setting. After all setting, tap "Rediagnosis" to re-connect again.

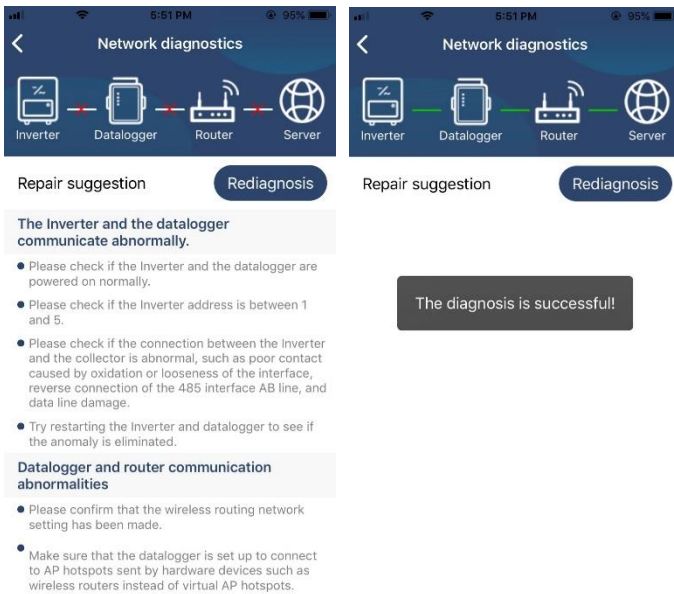


### 2-3. Login and APP Main Function

After finishing the registration and local Wi-Fi configuration, enter registered name and password to login.  
 Note: Tick "Remember Me" for your login convenience afterwards.



### Overview

After login is successfully, you can access "Overview" page to have overview of your monitoring devices, including overall operation situation and Energy information for Current power and Today power as below diagram.

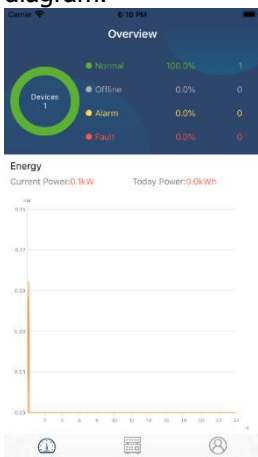



### Devices


Tap the  icon (located on the bottom) to enter Device List page. You can review all devices here by adding or deleting Wi-Fi Module in this page.

**Add device**

**Delete device**

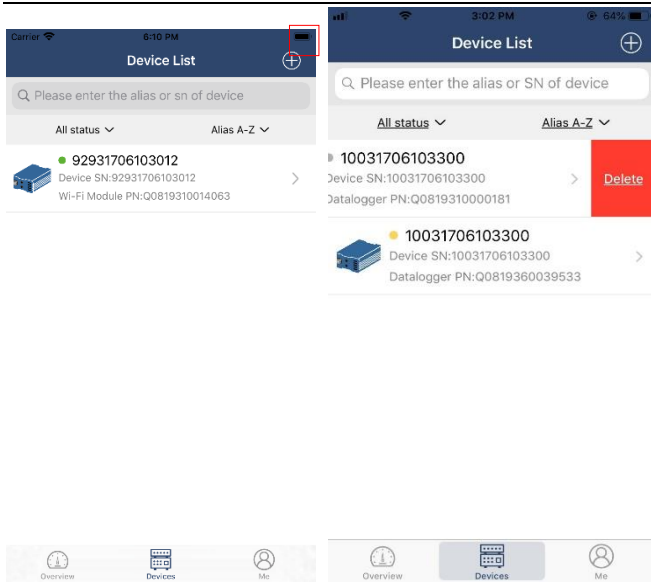

Tap  icon on the top right corner and enter part number by scanning bar code to add Wi-Fi module. This part number is pasted on the front panel and manually enter it. Tap "Confirm" to add Wi-Fi module in the Device list.

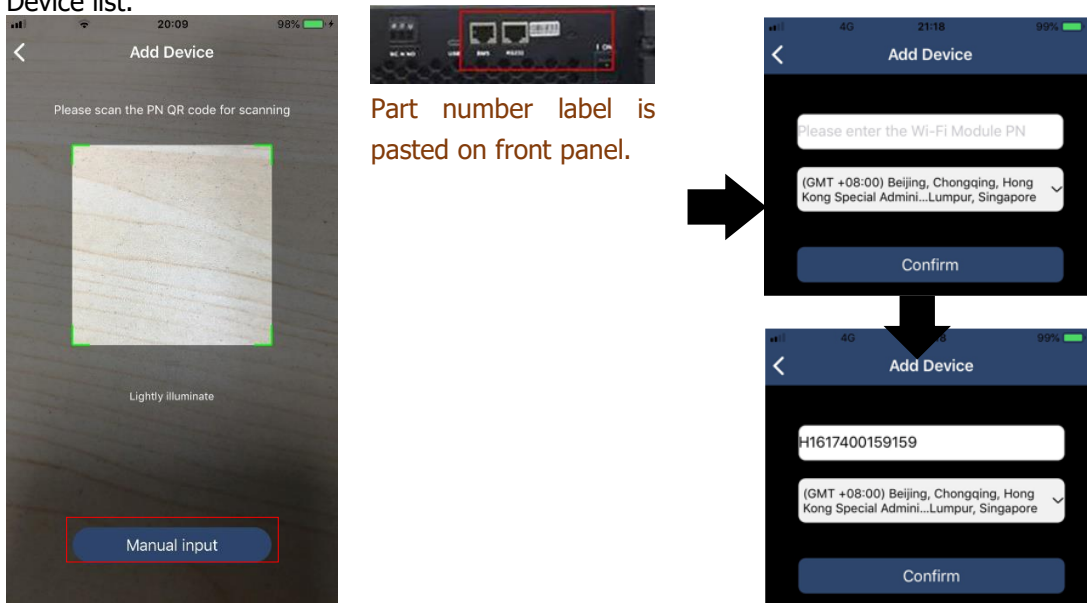


Part number label is pasted on front panel.

For more information about Device List, please refer to the section 2.4.


**ME**

In ME page, users can modify "My information", including **【User's Photo】** , **【Account security】** , **【Modify password】** , **【Clear cache】** ,and **【Log-out】** , shown as below diagrams.

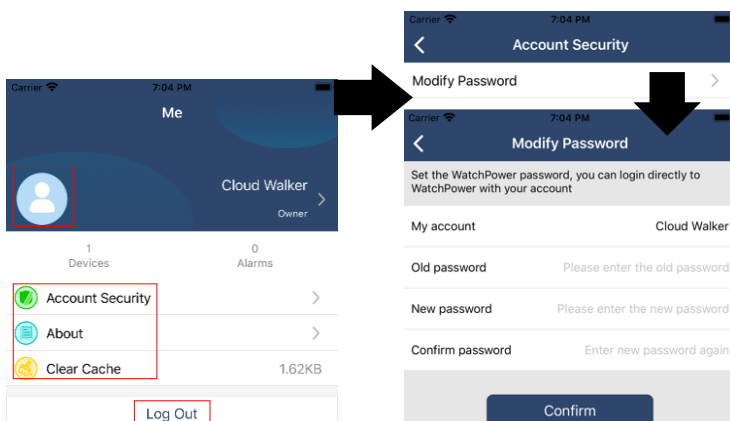

## 2-4. Device List


In Device List page, you can pull down to refresh the device information and then tap any device you want to check up for its real-time status and related information as well as to change parameter settings. Please refer to the parameter setting list.

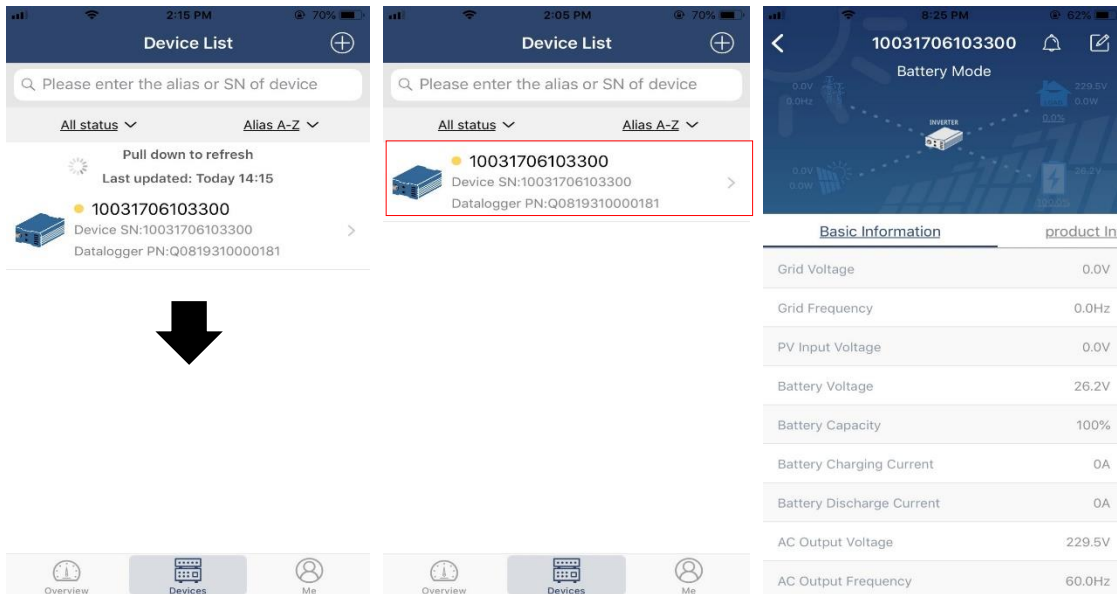

### Device Mode

On the top of screen, there is a dynamic power flow chart to show live operation. It contains five icons to present PV power, inverter, load, utility and battery. Based on your inverter model status, there will be **【Standby Mode】** , **【Line Mode】** , **【Battery Mode】** .

**【Standby Mode】** Inverter will not power the load until “ON” switch is pressed. Qualified utility or PV source can charge battery in standby mode.

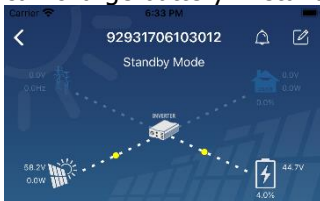



**【Line Mode】** Inverter will power the load from the utility with or without PV charging. Qualified utility or PV source can charge battery.




**【Battery Mode】** Inverter will power the load from the batter with or without PV charging. Only PV source can charge battery.




### Device Alarm and Name Modification

In this page, tap the  icon on the top right corner to enter the device alarm page. Then, you can review alarm history and detailed information. Tap the  icon on the top right corner, a blank input box will pop out. Then, you can edit the name for your device and tap "Confirm" to complete name modification.

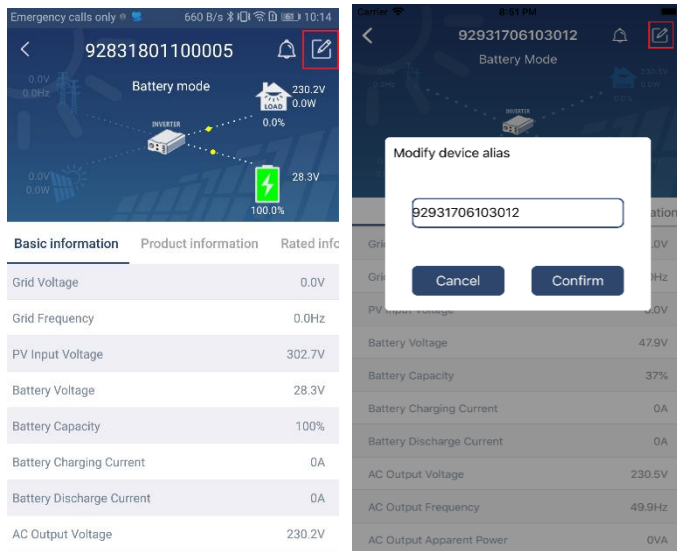

### Device Information Data

Users can check up **【Basic Information】**, **【Product Information】**, **【Rated information】**, **【History】**, and **【Wi-Fi Module Information】** by swiping left.

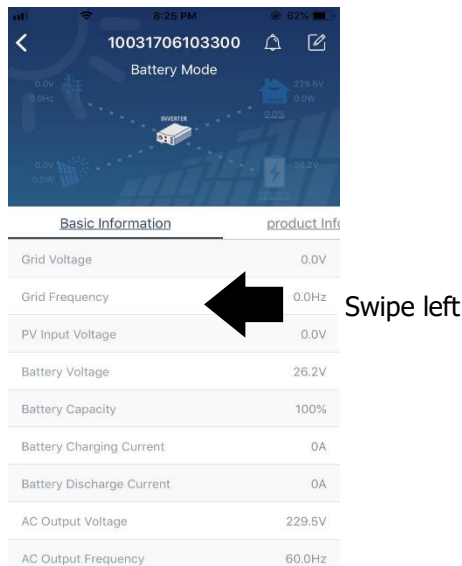

**【Basic Information】** displays basic information of the inverter, including AC voltage, AC frequency, PV input voltage, Battery voltage, Battery capacity, Charging current, Output voltage, Output frequency, Output apparent power, Output active power and Load percent. Please slide up to see more basic information.

**【Production Information】** displays Model type (Inverter type), Main CPU version and secondary CPU version.

**【Rated Information】** displays information of Nominal AC voltage, Nominal AC current, Rated battery voltage, Nominal output voltage, Nominal output frequency, Nominal output current, Nominal output apparent power and Nominal output active power. Please slide up to see more rated information.


**【History】** displays the record of unit information and setting timely.

**【Wi-Fi Module Information】** displays of Wi-Fi Module PN, status and firmware version.



## Parameter Setting

This page is to activate some features and set up parameters for inverters. Please be noted that the listing in "Parameter Setting" page in below diagram may differ from the models of monitored inverter. Here will briefly highlight some of it, **【Output Setting】** , **【Battery Parameter Setting】** , **【Enable/ Disable items】** , **【Restore to the defaults】** to illustrate.

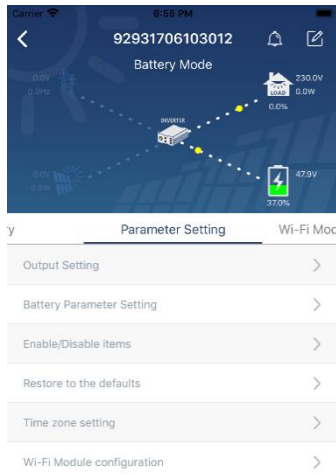

There are three ways to modify setting and they vary according to each parameter.

- a) Listing options to change values by tapping one of it.
- b) Activate/Shut down functions by clicking "Enable" or "Disable" button.
- c) Changing values by clicking arrows or entering the numbers directly in the column.

Each function setting is saved by clicking "Set" button.

Please refer to below parameter setting list for an overall description and be noted that the available parameters may vary depending on different models. Please always see the original product manual for detailed setting instructions.

### Parameter setting list:

| Item                      |                           | Description   |
|---------------------------|---------------------------|---|
| Output setting            | Output source priority    | To configure load power source priority.  |
|                           | AC input range            | When selecting "UPS", it's allowed to connect personal computer.<br>Please check product manual for details.  |
|                           |                           | When selecting "Appliance", it's allowed to connect home appliances.  |
|                           | Output voltage            | To set output voltage.  |
| Output frequency          | To set output frequency.  |   |
| Battery parameter setting | Battery type:             | To set connected battery type.  |
|                           | Battery cut-off voltage   | To set the battery stop discharging voltage.<br>Please see product manual for the recommended voltage range based on connected battery type.  |
|                           | Back to grid voltage      | When "SBU" or "SOL" is set as output source priority and battery voltage is lower than this setting voltage, unit will transfer to line mode and the grid will provide power to load. |
|                           | Back to discharge voltage | When "SBU" or "SOL" is set as output source priority and battery voltage is higher than this setting voltage, battery will be allowed to discharge.                                   |
|                           | Charger source priority:  | To configure charger source priority.   |

|                                      |  |  |
|--------------------------------------|--|--|
|                                      | Max. charging current  | It's to set up battery charging parameters. The selectable values in different inverter model may vary. Please see product manual for the details. |
|                                      | Max. AC charging current:  |  |
|                                      | Float charging voltage   |  |
|                                      | Bulk charging voltage  | It's to set up battery charging parameters. The selectable values in different inverter model may vary. Please see product manual for the details. |
|                                      | Battery equalization   | Enable or disable battery equalization function.   |
|                                      | Real-time Activate Battery Equalization                            | It's real-time action to activate battery equalization.  |
|                                      | Equalized Time Out   | To set up the duration time for battery equalization.  |
|                                      | Equalized Time   | To set up the extended time to continue battery equalization.  |
|                                      | Equalization Period  | To set up the frequency for battery equalization.  |
|                                      | Equalization Voltage   | To set up the battery equalization voltage.  |
|                                      | Enable/Disable Functions   | LCD Auto-return to Main screen   |
| Fault Code Record                    |  | If enabled, fault code will be recorded in the inverter when any fault happens.  |
| Backlight                            |  | If disabled, LCD backlight will be off when panel button is not operated for 1 minute.   |
| Bypass Function                      |  | If enabled, unit will transfer to line mode when overload happened in battery mode.  |
| Beeps while primary source interrupt |  | If enabled, buzzer will alarm when primary source is abnormal.   |
| Over Temperature Auto Restart        |  | If disabled, the unit won't be restarted after over-temperature fault is solved.   |
| Overload Auto Restart                |  | If disabled, the unit won't be restarted after overload occurs.  |
| Buzzer                               |  | If disabled, buzzer won't be on when alarm/fault occurred.   |
| RGB LED Setting                      | Enable/disable   | Turn on or off RGB LEDs  |
|                                      | Brightness   | Adjust the lighting brightness   |
|                                      | Speed  | Adjust the lighting speed  |
|                                      | Effects  | Change the light effects   |
|                                      | Color selection  | Adjust color combination to show energy source an battery status   |
| Restore to the default               | This function is to restore all settings back to default settings. |  |